

Multi Function Rechargeable LED Safety Wand / Flashlight with Megaphone for Crowd Control, Traffic Direction & Emergency Search & Rescue

Multi Functions: 4 Sealed Buttons, Weather Resistant

**Red Light:** Press button once - turns on *FLASHLIGHT* and *LED SIGNAL LIGHT*. Press again to turn off.

**Signal Light (Flashlight button):** Press button once turns on *FLASHING SIGNAL LIGHT* and *FLASHLIGHT*. Press *RED LIGHT* button to turn off *FLASHING SIGNAL LIGHT*. *FLASHLIGHT* stays on. Press *FLASHLIGHT* button to turn on *SIGNAL LIGHT*. Press *RED LIGHT* button to turn all off.

**Talk:** Grasp end of Safety Wand, which is the microphone, turn counter clockwise and pull to detach from end of Safety Wand. Press *TALK* button to turn microphone on. Speak into end which is the microphone. To adjust volume, locate control knob under rubber flap and rotate to adjust. Press *TALK* button again to turn off. To re-attach microphone to bottom of Safety Wand, press and turn microphone clockwise onto end.

**Whistle:** Press button once - turns on *WHISTLE.* Use volume control to adjust loudness.

**Rechargable Battery:** Plug AC charger adapter into an AC outlet and connect other end into Safety Wand plug under rubber flap next to Control Buttons.

## SPECIFICATIONS

Megaphone:	20 Watts, Bottom of Handle Removable Piezo Microphone, 5' coil cord
Speaker:	3/4", In Handle
Whistle:	105 db @ 1 meter
Signal Light:	5 Red LED's - Continuous or Flashing 1 White LED - Tip, Flash Light 100,000 Hr. Lamp Life
Visibility:	3000 Yards
Lens:	Polycarbonate
Battery:	100 Hours Run Time, Rechargeable Ni-MH 10.8V
Accessories:	Belt Holder, 9V AC Charger Adapter, Vehicle Charger Adapter
Weight:	.95 oz
Size:	21 1/4" L x 2 1/2" W



AmpliVox • 650 Anthony Trail Suite D, Northbrook, IL 60062 • Phone: (800)267-5486 • Fax: (800)267-5489 www.ampli.com