


Installation Instructions


telehook

Flat Screen Wall Mount | Fixed


Components Checklist

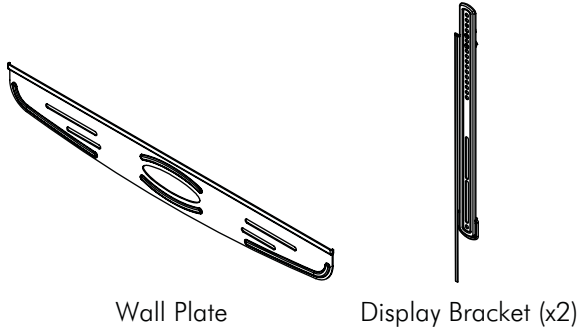

Hardware

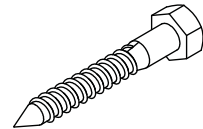

Coach Screw (x2)

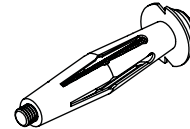


Dry Wall anchor (x4)

M5/6/8 Washer
(x4 each)

M4/5 Spacer (x4)



 M6/8 Spacer (x4)




Nylon Anchor (x2)



M5x30/16mm (x4 each)



 M6x30/16mm (x4 each)



M8x30/16mm (x4 each)

Display Mounting Screws

Tools Required:

- Power Drill
- 6mm ($\frac{1}{4}$ ") drill bit
- Phillips Head screwdriver
- 10mm ($\frac{3}{8}$ ") masonry drill bit
- Large Flat Head Screw Driver
- 13mm ($\frac{1}{2}$ ") Socket Wrench or Shifter
- 10mm ($\frac{3}{8}$ ") drill bit
- Spirit Level

IMPORTANT INFORMATION

! IMPORTANT - Install Telehook 3060 Wall Mount as per Installation Instructions.

! This product supports a maximum load of 65kg (143.3lbs).

! This product supports displays with mounting hole configurations from 100mm (4") to 500mm (19½") high, and from 200mm (8") to 810mm (32") wide.

! The manufacturer does not accept responsibility for incorrect installation.

! Before installing this Telehook product, please check the display ventilation requirements with your LED/LCD manufacturer.


Step 1. Check Components

Check you have received all parts against the component checklist and Hardware above.


Step 2. Mounting the Wall Plate

Dry Wall

Note: Each Dry Wall anchor should be at a maximum distance from the next anchor point. This is the recommended mounting pattern for Dry Wall Anchors.

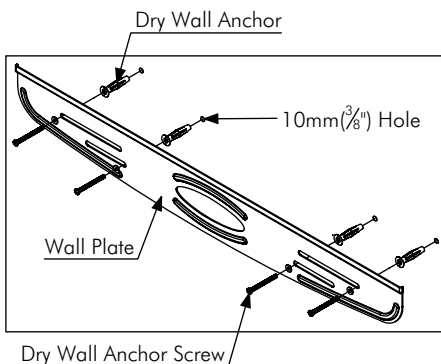


Masonry Wall

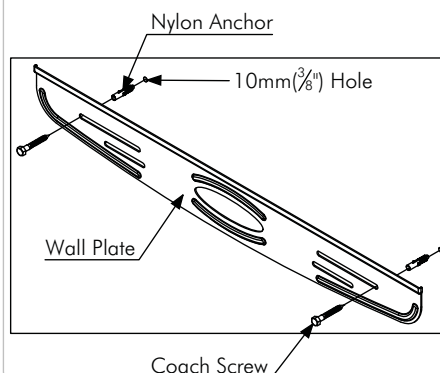


Timber Stud

Note: Use a stud finder to accurately locate the centre of the stud. Ensure that all two screws fix securely into the stud.

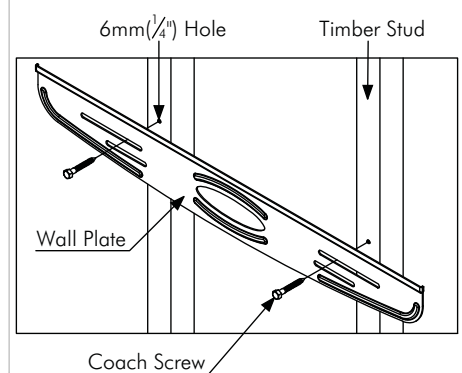

Tip: Use a spirit level to ensure wall plate is horizontal.

Step 3. Attaching Brackets to Display

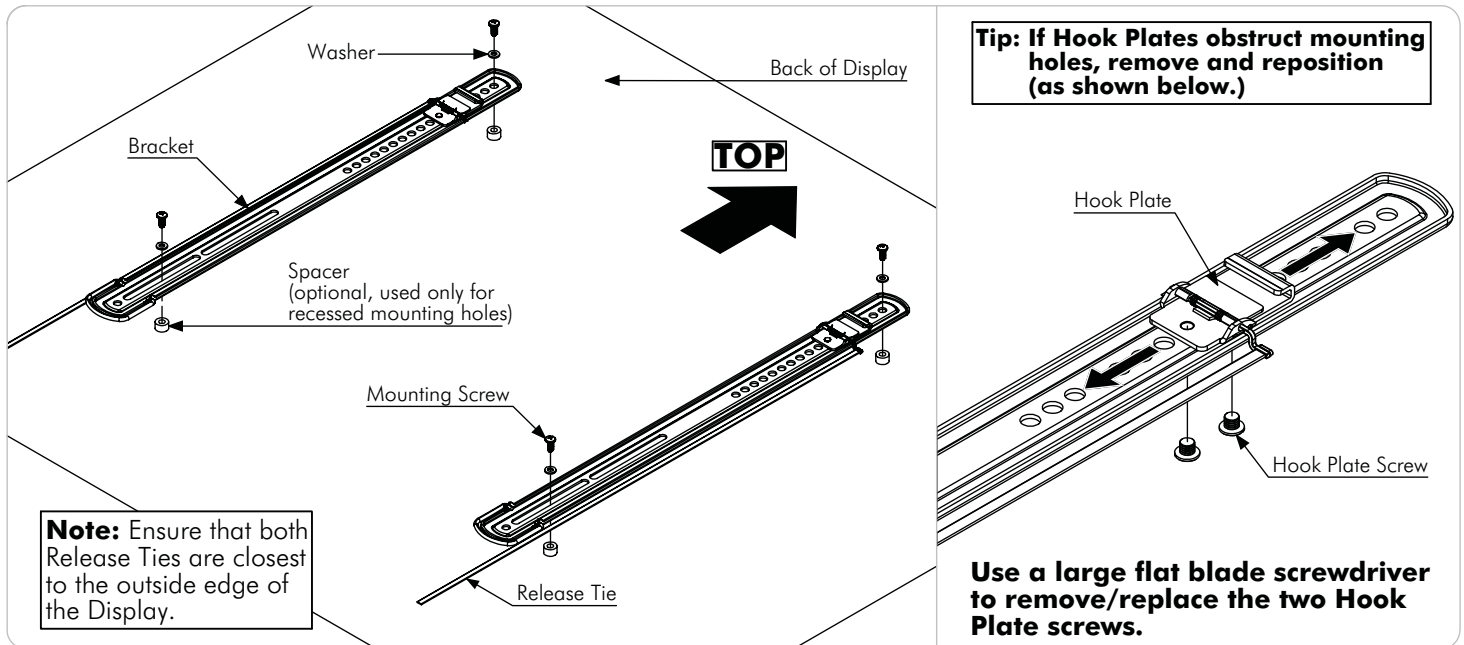


Step 4. Attaching/Detaching Display to Wall Plate (2 people required)

With the Brackets attached to the Display, lower the Hook Plates onto the Wall plate. Listen for "CLICK" to ensure the catch has engaged.

Slide Display to desired position.


Detaching Display from Wall Plate:

To detach Display from wall plate, pull and hold Release Ties to disengage locking mechanism. Then lift the Display to unhook from the wall plate.

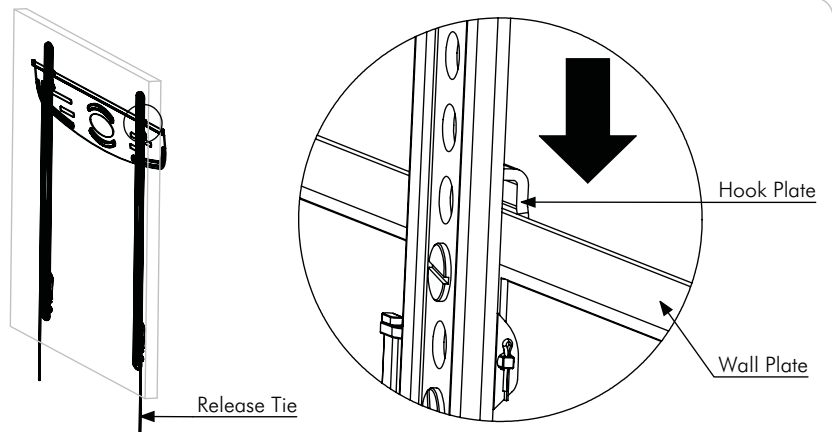


Step 5. Cable Management

Note: To access cable ports, fold out screen tilt supports.

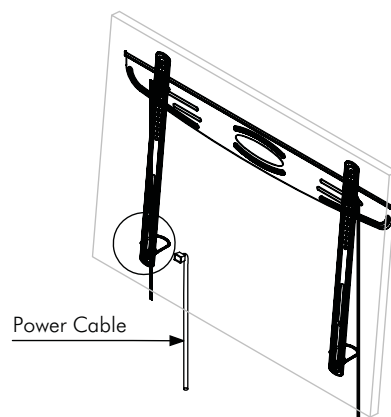

Fold Tilt Supports back once all cables have been installed.

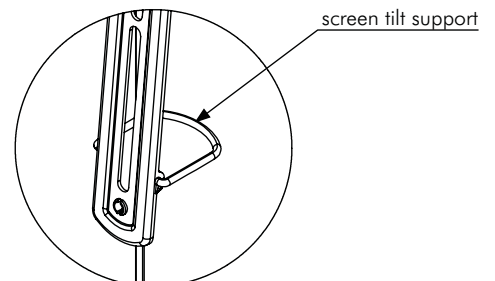

Cut Release Ties so that they cannot be seen from front of screen.

Installation Complete

