PHANTOM 3

STANDARD

User Manual V1.0

2015.08





Using this Manual

Legends

↑ Important

: Hints and Tips

Reference

Readings

Read the following documents before using your Phantom 3 Standard.

- 1. In the Box
- 2. Phantom 3 Standard User Manual
- 3. Phantom 3 Standard Quick Start Guide
- 4. Phantom 3 Standard Guidelines and Disclaimer
- 5. Phantom 3 Standard Intelligent Flight Battery Safety Guidelines

To prepare for your first flight, follow the steps in the Phantom 3 Standard Quick Start Guide. Read the Guidelines and Disclaimer to understand your legal rights and responsibilities.

Video Tutorials

These tutorials will guide you all the way through unboxing, updating the firmware, and your maiden flight. http://www.dji.com/product/phantom-3-standard/video

DJI GO App

Download the DJI GO app on the App Store or Google Play, or by scanning the QR code on the right.



The DJI GO app supports iOS 8.0 and Android 4.1.2, or later versions.

Contents

Using this Manual	
Legends	2
Readings	2
Video Tutorials	2
DJI GO App	2
Product Profile	
Introduction	6
Key Features	6
Preparing the Aircraft and Remote Controller	7
Aircraft Diagram	8
Remote Controller Diagram	8
Aircraft	
Flight Controller	10
Flight Modes	10
LED Indicators	10
Return-to-Home (RTH)	11
Smart RTH	11
Low Battery RTH	12
Failsafe RTH	13
Flight Data	13
Attaching and Detaching the Propellers	13
Intelligent Flight Battery	15
Remote Controller	
Profile	21
Controls and Operation	21
Camera and Gimbal	
Camera	28
Gimbal	29

DJI GO App	
Equipment	32
Library	35
Explore	35
Me	35
Flight	
Flying Conditions	37
Flight Limits and No Fly Zones	37
Pre-flight Checklist	41
Calibrating the Compass	41
Auto Takeoff and Landing	42
Starting and Stopping the Motors	43
Flight Test	43
FAQ	
Annual	
Appendix	
Specifications	50

52

53

Intelligent Orientation Control (IOC)

FCC Compliance

Product Profile

This section introduces the features of the aircraft and remote controller.

Product Profile

Introduction

The Phantom 3 Standard is an easy-to-fly quadcopter for aerial photography and filmmaking. It includes a high-quality camera, custom-built remote controller, and Intelligent Flight Battery, and is compatible with the DJI GO app for mobile devices.

Key Features

Camera and Gimbal: The built-in camera captures video at 2.7K and 12 megapixel photos. A 3-axis gimbal holds the camera stable and steady as you fly, resulting in shake-free footage every time.

Intelligent Flight Battery: A 4480 mAh lithium polymer Intelligent Flight Battery features an advanced power management system, and provides up to 25 minutes of flight time.

 
WiFi Video Downlink: Live HD video is streamed from the camera to the DJI GO app over WiFi as you fly. A WiFi range extender is built into the remote controller.

Flight Controller: Flying is easy and safe with a flight controller optimized to enable controlled, stable flight. Critical flight data is collected, computed and communicated to the entire aircraft in real time.

Preparing the Aircraft and Remote Controller


Removing the Gimbal Clamp

Slide the gimbal clamp off the camera.



Attaching the Propellers


Attach the black propeller nuts onto the motors with black dots and spin them counter-clockwise to secure. Attach the silver propeller nuts onto the motors without black dots and spin them clockwise to secure.

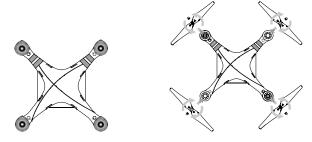


Tighten the propellers with both hands before each flight.

Preparing the Remote Controller:

- 1. Unfold the mobile device holder and adjust its position and angle.
- 2. Slide the power switch to the right to turn on the remote controller. Ensure the battery is fully charged.
- 3. Be sure the S1 switch is toggled to the upper most position. The Status LED will become solid green if the remote controller is functioning properly.

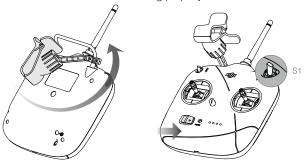


Aircraft Diagram

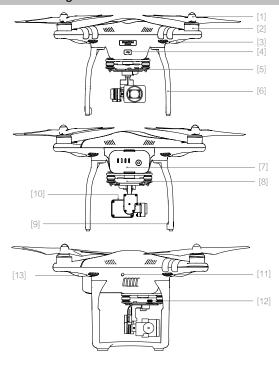

- [1] Propellers
- [2] Motors
- [3] Front LED Indicator
- [4] Aircraft Micro USB Port
- [5] Camera Status Indicator
- [6] Landing Gear
- [7] Intelligent Flight Battery
- [8] Gimbal and Camera
- [9] Antennas
- [10] Camera Micro SD card slot
- [11] Link Button
- [12] Camera Micro USB Port
- [13] Aircraft Status Indicator

Remote Controller Diagram

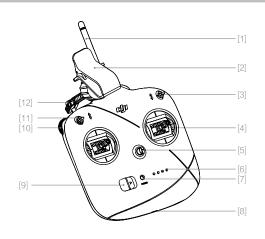

- [1] Antenna
- [2] Mobile Device Holder
- [3] Switch S1
- [4] Control Sticks
- [5] Lanyard Loop
- [6] Battery Level Indicator
- [7] Status LED
- [8] Micro USB Charging Port
- [9] Power Switch
- [10] Gimbal Dial
- [11] Switch S2
- [12] Handle Bar



Aircraft

This section introduces the features of the flight controller and the Intelligent Flight Battery.

Aircraft

Flight Controller

The flight controller provides stability, safety and control to the Phantom 3 Standard. The supported flight modes are designed to optimize aircraft control for different conditions and purposes. The flight controller allows the aircraft to automatically Return-to-Home (RTH) if the remote controller signal is lost (i.e. Failsafe RTH) or when instructed to by the pilot (i.e. Smart RTH), ensuring the safe return of your aircraft. Flight data is stored to the device every time you fly and can be accessed anytime.

Flight Modes

Three flight modes are available. The details of each flight mode are found below:

P-Mode (Positioning): P-Mode works best when the GPS signal is strong. One of its two states will be selected by the aircraft automatically depending on GPS signal strength.

P-GPS: GPS is available. The aircraft uses GPS for positioning.

P-ATTI: GPS is not available. The aircraft only uses its barometer to maintain altitude.

A-Mode (Attitude): GPS is not used for positioning, and the aircraft only uses its barometer to maintain altitude. If a GPS signal is present, the aircraft will still return to the last recorded Home Point if the remote controller signal is lost.

F-Mode (Function): Intelligent Orientation Control (IOC) is supported in this mode. Refer to the IOC section in the Appendix for more information.

The Flight Mode Switch is locked in P-Mode by default. To enable other flight modes, go to the DJI GO app > Camera View > 🔀 > Advanced Settings > Enable Multiple Flight Modes.

LED Indicators

The Phantom 3 Standard has two Front LEDs located under the two front motors and two Aircraft Status Indicators located under the two rear motors



The Front LEDs glow solid red when the aircraft is turned on and help you orientate the aircraft when it is in the air. You can switch off the Front LEDs in the DJI GO app to achieve a better filming result. The Aircraft Status Indicators indicate the status of the flight controller. See the table below for details of its blinking patterns.

Aircraft Status Indicator Blinking Patterns

Normal	
® © 💮 Flashes red, green and yellow alternatively	Turning on and running self-diagnostic test
G: Y: Flashes green and yellow alternatively	Warming up
⑤ ······ Flashes green slowly	Safe to Fly (P-Mode with strong GPS signal)
: : Flashes yellow slowly	Safe to Fly (A-mode but No GPS signal)
Warning	
: Flashes yellow quickly	Remote controller's signal lost
®······Flashes red slowly	Low Battery Warning
®······Flashes red quickly	Critical Battery Warning
® ····· Flashes red (Alternates with other patterns)	IMU error
® — Glows solid red	Critical error
® 💮 · · · · · Flashes red and yellow alternatively	Compass calibration required

Return-to-Home (RTH)

The Return-to-Home (RTH) procedure brings the aircraft back to the last recorded Home Point. There are three types of RTH procedures: Smart RTH, Low Battery RTH, and Failsafe RTH. The following sections describe them in detail.

	GPS	Description
Home Point	≫ .ш∥	The Home Point is the location at which the aircraft takes off. A strong GPS signal (* III) must be present for the aircraft to record the Home Point. If the Home Point is recorded successfully, the Aircraft Status Indicator will blink green rapidly.

Smart RTH

Tap & in the DJI GO app or toggle the S2 switch on the remote controller back and forth at least twice to initiate Smart RTH. The aircraft will first ascend to the Return-to-Home altitude, then return to the last recorded Home Point if a GPS signal is available. During the RTH procedure, you may use the remote controller to guide the aircraft around obstacles.

Tap & or toggle the S1 switch once to terminate Smart RTH and regain full control of the aircraft.

 
Low Battery RTH

When the Intelligent Flight Battery is depleted to a point that may affect the safe return of the aircraft, the Low Battery Level Warning or Critically Low Battery Warning will appear in the DJI GO app. The thresholds for these warnings are automatically determined based on the aircraft's current altitude and distance from the Home Point, but you can also set your own fixed thresholds as extra precaution.

Observe the Battery Level Indicator as you fly your aircraft. The 12:29 icon displays the estimated remaining flight time, and the 10 icon represents the point when the battery level is just enough for the aircraft to return to the Home Point. The 12:29 icon gradually moves to the left as the battery is consumed.

When the 12.29 icon enters the yellow region, the Low Battery Level Warning will appear and prompt you to Return-to-Home. The aircraft will automatically return to the Home Point if no action is taken after 10 seconds, but you can resume normal flight by tapping & or toggling the S1 switch.

When the 1229 icon enters the red region, the battery level can only support the aircraft to land from its current altitude. The Critically Low Battery Level Warning will appear and the aircraft will begin to descend automatically. You should find a suitable location to the land the aircraft immediately.



Battery Level Warning	Description	DJI GO App	Aircraft
Low Battery Warning	The battery level is just sufficient for the aircraft to safely return to the Home Point.	Prompts the pilot to start the Return-to-Home procedure.	The Aircraft Status Indicator flashes RED slowly. The aircraft will automatically return to the Home Point if no action is taken after 10 seconds.
Critically Low Battery Level Warning	The battery level can only support the aircraft to land from its current altitude.	Alerts the pilot of the aircraft's automatic descent (cannot be cancelled). The screen will flash RED.	The Aircraft Status Indicator flashes RED quickly. The aircraft begins to descend and land itself automatically.

 


 
 While the aircraft is in automatic descent, you can still control the aircraft's movement although its ascent speed is very limited. Use this opportunity to find a suitable landing location.

 
Failsafe RTH

Failsafe RTH will be triggered if the remote controller signal is lost for more than three seconds, provided that a Home Point was recorded previously. You can regain control of the aircraft if the remote controller signal is recovered.

Failsafe RTH Illustration















- The aircraft will automatically descend and land if Failsafe RTH is triggered when the aircraft
 is within a 20 meter (65 feet) radius of the Home Point. During the RTH procedure, if you move
 the throttle stick after the aircraft rises above 65 feet (20m), the aircraft will stop ascending and
 immediately return to the Home Point.
- The aircraft cannot Return-to-Home if the signal is weak ([* |] is grey).
- The aircraft cannot avoid obstacles during the Failsafe RTH procedure, and therefore it is important to set a suitable Return-to-Home altitude before each flight. Go to the DJI GO app > Camera View > Advanced Settings > Failsafe Mode to set the Failsafe altitude.

Flight Data

The aircraft automatically keeps a record of detailed flight data including telemetry measurements, aircraft status information, and error messages. To export this data, connect the aircraft to the PC through the Micro USB port and launch the DJI GO app to export this data. This data can be later analyzed with the proper software if necessary.


Attaching and Detaching the Propellers

Only use official DJI Phantom 3 propellers with your Phantom 3 Standard.

Propellers	Silver Propeller Nut	Black Propeller Nut
Figure		
Attach On	Motors without a black dot	Motors with a black dot
Legends	Lock : Turn the propellers in th បាប់ Unlock : Turn the propellers in	

Attaching the Propellers

- 1. Remove the warning stickers from the motors before attaching the propellers.
- Attach the black propeller nuts onto the motors with black dots and spin them counter-clockwise to secure. Attach the silver propeller nuts onto the motors without black dots and spin them clockwise to secure.

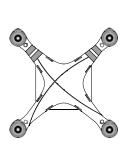





- Ensure the propellers are attached to the correct motors.
- Tighten the propellers with both hands before each flight.
- Ensure that all propellers are in good condition before each flight. DO NOT use aged, chipped, or broken propellers.
- Stand clear of the motors and DO NOT touch the propellers when they are spinning.

Detaching the Propellers

Put the propeller removal clamp around the motor, and pinch both sides as shown below to hold the motor in place. Then rotate the propeller in the unlock direction Υ to loosen it.

 


Intelligent Flight Battery

The DJI Intelligent Flight Battery has a capacity of 4480 mAh, a voltage of 15.2 V and a smart charge/discharge functionality. It should only be charged with the official DJI battery charger.








Note that the output power of the supplied Phantom 3 Standard charger is 57 W.

DJI Intelligent Flight Battery Functions

- 1. Battery Level Display: LEDs display the current battery level.
- 2. Battery Life Display: LEDs display the current battery life.
- 3. Auto-Discharging Function: The battery automatically discharges to below 65% of battery level when it is left idle (pressing the power button will exit idle state) for more than 10 days to prevent swelling. It takes about two days to discharge the battery from 100% to 65%, and it is normal to feel moderate heat emitting from the battery during the discharge process. The discharge thresholds can be adjusted in the DJI GO app.
- 4. Balanced Charging: Automatically balances the voltage of each battery cell when charging.
- 5. Overcharge Protection: Automatically stops charging the battery when it is fully charged.
- Temperature Detection: The battery will only charge when its core temperature is between 0°C and 40°C (32°F and 104°F).
- 7. Overcurrent Protection: The battery stops charging when the maximum current of 8A is exceeded.
- Over-Discharge Protection: The battery stops discharging when the battery voltage reaches 12V to prevent damage from over-discharge.
- 9. Short Circuit Protection: Automatically cuts the power supply when a short circuit is detected.
- Battery Cell Damage Detection: The DJI GO app display a warning message if a damaged battery cell is detected.
- 11. Battery Log: Show the last 32 entries of battery information including warning messages.
- 12. Sleep Mode: The battery enters sleep mode after 20 minutes of inactivity to save power.
- 13. Communication: The battery voltage, capacity, current and other relevant information is sent to the flight controller.
 - Read the Phantom 3 Standard Intelligent Flight Battery Safety Guidelines before use. Users take full responsibility for all operations and usage.

 Using the Battery



Turning On or Turning Off the Battery

Press the power button once, again, and hold for 2 seconds.

When turning off the battery, the power button may continue to flash for a few seconds if the aircraft is still storing media files to the Micro SD card.

Low Temperature Environments:

- The battery capacity is significantly reduced when flying in cold environments (i.e. air temperatures below 0°C).
- 2. It is not recommended to fly in very cold environments (i.e. air temperatures below -10°C). Ensure the battery voltage is stable when operating in air temperatures between -10°C and 5°C.
- End the flight as soon as possible if the Low Battery Level Warning appears when you are flying in low temperature environments.
- 4. Try to warm up the battery indoors prior to flying in low temperature environments.
- 5. Keep the battery core temperature above 20°C to ensure optimal performance.
- 6. The charger will pause the charging process if the battery core temperature is out of operating range (0°C \sim 40°C).



- Ensure the temperature of the Intelligent Flight Battery exceeds 5°C before takeoff.
- To warm up the aircraft battery, power it on inside the battery compartment for approximately 1-2 minutes before takeoff. Begin flying by hovering the aircraft at a low altitude for approximately 1 minute to ensure that the battery temperature is stable.

Checking the Battery Level

When the battery is powered off, press the power button once. The Battery Level Indicator will light up to display the current battery level. See the table below for more details.

The Battery Level Indicators will also show the current battery level during charging and discharging. The LED states are defined below.

: LED is on. : LED is flashing.

LED Patterns	LED Patterns					
LED1	LED2	LED3	LED4	Battery Level		
0	0	0	0	87.5%~100%		
0	0	0	0	75%~87.5%		
	0	0	0	62.5%~75%		
0	0	0	0	50%~62.5%		
0	0	0	0	37.5%~50%		
0	Û	0	0	25%~37.5%		
	0	0	0	12.5%~25%		
0	0	0	0	0%~12.5%		
0	0	0	0	0%		

Checking the Battery Life

The battery life indicates the number of cycles the battery can be charged and discharged before it must be replaced. When the battery is turned off, press and hold the power button for 5 seconds to check the battery life. The Battery Level Indicator will light up with one of the following LED patterns:

LED Patterns	LED Patterns				
LED1	LED2	LED3	LED4	Battery Life	
0	0	0	0	90%~100%	
0	0	0	0	80%~90%	
0	0	0	0	70%~80%	
0	0	Û	0	60%~70%	
0	0	0	0	50%~60%	
	Û	0	0	40%~50%	
	0	0	0	30%~40%	
0	0	0	0	20%~30%	
	0	0		Below 20%	

 
⚠ When the battery life reaches 0%, the Intelligent Flight Battery must be replaced.

For more information about the battery, launch the DJI GO app and tap \$\overline{k}\$100% in Camera View.

Charging the Intelligent Flight Battery

- 1. Connect the battery charger to a suitable power supply (100-240V, 50/60Hz).
- Open the protection cap on the battery charger and connect it to the Intelligent Flight Battery. If the battery level is above 95%, turn on the battery before charging, otherwise it will not be fully charged.
- 3. The Battery Level Indicator will display the current battery level as it is charging.
- 4. The Battery Level Indicators will turn off when charging is complete. Disconnect the Intelligent Flight Battery from the battery charger.
 - Always turn off the Intelligent Flight Battery before inserting it into or removing it from the aircraft.

 Air cool the Intelligent Flight Battery after each flight. Allow its temperature to drop to room temperature before charging it.



Battery Level	Battery Level Indicators while Charging					
LED1	LED2	LED3	LED4	Battery Level		
0		0		0%~25%		
0	0	0	0	25%~50%		
0	0	0	0	50%~75%		
0	0	0	0	75%~100%		
	0	0	0	Fully Charged		

Battery Protection Mechanism

The table below shows the LED blinking patterns and their corresponding battery protection warning.

Battery	Battery Level Indicators while Charging					
LED1	LED2	LED3	LED4	Blinking Pattern	Battery Protection Warning	
		0	0	LED2 blinks twice per second	Over current detected	
0	0	0	0	LED2 blinks three times per second	Short circuit detected	
	0	1	0	LED3 blinks twice per second	Overcharge detected	
0	0	Ü	0	LED3 blinks three times per second	Charger overvoltage detected	
0	0	0	0	LED4 blinks twice per second	Charging temperature is too low (<0°C)	
0	0	0	0	LED4 blinks three times per second	Charging temperature is too high (>40°C)	

After any of the above protection issues are resolved, press the power button to turn off the battery protection warning. Unplug the Intelligent Flight Battery from the battery charger and plug it back in to resume charging. Note that you do not need to unplug and plug the battery charger in the event of a room temperature error; the battery charger will resume charging when the temperature falls within the normal range.



DJI does not take any responsibility for damage caused by third-party battery chargers.



Discharging the Intelligent Flight Battery

Slow: Place the Intelligent Flight Battery into the Phantom 3 Standard's battery compartment and turn it on. Leave it on until there is less than 8% of battery remaining, or until the battery can no longer be turned on. Check the battery level in the DJI GO app.

Fast: Fly the Phantom 3 Standard outdoors until there is less than 8% of battery remaining or until the battery can no longer be turned on.

Remote Controller

This section describes the features of the remote controller, and includes instructions for controlling the aircraft and the camera.



Remote Controller

Profile

The Phantom 3 Standard remote controller features a 2.4 GHz WiFi Video Downlink, 5.8 GHz aircraft transmission system, and a built-in battery. It is capable of transmitting signals to the aircraft at up to 0.62 miles (1 km). There is a foldable mobile device holder attached to the remote controller used to mount your smartphone.



- Compliance: The remote controller is made to comply with both CE and FCC standards.
- Operating Modes: The controls can be set to Mode 1, Mode 2 or a custom mode.
- Mode 1: The right stick serves as the throttle.
- Mode 2: The left stick serves as the throttle.



The mobile device holder can be tilted at different positions and angles.




DO NOT force an overlarge mobile device into the mobile device holder.

Controls and Operation

Powering on the Remote Controller

- Toggle the S1 switch to the upper most position and ensure both control sticks are in the neutral position.
- 2. Slide the power switch to the right to turn on the remote controller.
- 3. The Status LED will light up solid green when the remote controller is connected to the aircraft. The Battery Level Indicator will display the battery level of the remote controller.

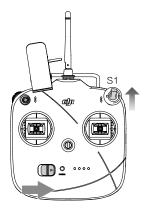

Charging the Remote Controller

Charge the remote controller through the Micro USB port using the provided Micro USB cable. The Battery Level Indicator will blink green when it is charging.

Remote Controller Operation

The remote controller is set to Mode 2 by default.

Neutral Position: The control stick is released and in the central position.

Remote Controller	Aircraft (Indicates nose direction)	Operation
		Vertical movement of the left stick controls the aircraft's elevation. Push up to ascend and press down to descend. Use the left stick to take off when the motors are spinning at idle speed. The aircraft will hover in place if the stick is in the neutral position.
		Horizontal movement of the left stick controls the aircraft's heading. Move left to rotate the aircraft counter clock-wise and move right to rotate the aircraft clockwise.
		Vertical movement of the right stick controls the aircraft's pitch. Push up to fly forwards and press down to fly backwards. Move the stick further for a larger pitch angle and faster flight.
		Horizontal movement of the right stick controls the aircraft's roll. Move the stick left to fly left and right to fly right. Move the stick further for a larger roll angle and faster flight.
		Turn the Gimbal Dial to the right to tilt the camera upwards, and to the left to tilt the camera downwards.









Toggle the S1 switch back and forth multiple times to regain the control of the aircraft during Failsafe RTH.

Toggle the S1 switch back and forth for more than 3 times to calibrate the aircraft's compass.

Toggle the S1 switch to position 1 to enable P-Mode, to position 2 to enable A-Mode, and to position 3 to enable F-Mode.









Toggle the S2 switch back and forth at least twice to initiate Smart RTH. Use the S2 switch and the gimbal dial to link with the aircraft and reset the WiFi password. Refer to Linking the Remote Controller on page 24 and Resetting the WiFi Video Downlink on page 26 for more details.



- The aircraft will hover in place when both sticks are released and GPS is available.
 - If GPS is not available, the aircraft will lock its altitude but drift from side to side.

Battery Level Indicator

The figure below illustrates the four battery levels that are displayed by the Battery Level Indicator on the remote controller's front panel.

Battery Level Indicator







25% 50% 75% 100%

Always ensure the remote controller has an adequate battery level before each flight. If the battery level is critically low, the remote controller will sound an alert and its Status LED will blink red for 3 seconds before automatically powering off. If the remote controller powers off during flight, the aircraft will enter Failsafe RTH.

Optimal Transmission Range

 
To achieve optimal transmission, point the top of the remote controller at the aircraft, and adjust the antenna so that it is parallel to the aircraft's legs (or simply tilt it at a 45 degree angle).



Optimal Transmission Range


Linking the Remote Controller

The Phantom 3 Standard is linked to the remote controller by default, and re-linking is only necessary if the remote controller is replaced with a new one. Refer to the figure below to locate the Link Button.



Linking Procedures

- 1. Turn on the aircraft and press the Link Button. The button will blink red when the aircraft is ready to link.
- 2. Switch on the remote controller, turn the gimbal dial to the far left, and toggle the S2 switch back and forth quickly for at least three times. You will hear a pulsating beep sound when the remote controller is trying to link to the aircraft.
- The remote controller will stop beeping and the Link Button on the aircraft will turn solid green if linking is successful.

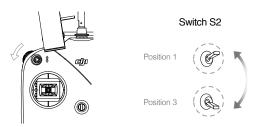

Linking Status

Link Button	Description	User Action
	No RC signal	Switch on the RC or perform a linking procedure
© · · · · · Blinks red	Ready to link	Switch on the RC
G — Glows solid green	Linked to RC	Linking successful

CE or FCC Compliance

The remote controller complies with CE compliance as default. Switch between CE and FCC is automatically adjusted according to the GPS locations acquired by the DJI GO app.

- ↑ The CE compliant remote controller has an effective signal range of 0.31 miles (500 m) in open spaces.
 - The FCC compliant remote controller has an effective signal range of 0.62 miles (1000 m) in open
 - Be aware of your flying distance as the aircraft will enter Failsafe RTH if it flies beyond transmission range.
 - Observe local laws and regulations that apply to your flight location.

Remote Controller Status LED Description


	·	
Status LED	Sound	Remote Controller Status
G — Solid green	None	Functioning normally and fully charged.
® — Solid red	None	Charging (remote controller is powered off). Remote controller is not connected to the aircraft.
∵ — Solid yellow	None	Control stick calibration error. Battery fully charged but remote controller is not connected to the aircraft.
® Blinks red slowly	BBBB	Low battery level. Recharge the remote controller.
	B-B-B	Critically low battery level, the remote controller will automatically power off after 3 seconds / The remote controller is switched on with the control stick not in the neutral position.
© Blinks green slowly	BBB	Inactivity for over 6 minutes. Switch off the remote controller if it is not in use.

WiFi Video Downlink

Used to boost the transmission range between the on-board camera and the remote controller, the 2.4 GHz WiFi video downlink is integrated into the remote controller and provides the device with an effective communication range of up to 0.62 miles (1000 m). It also enables the remote controller to connect to the DJI GO app wirelessly.

Connecting to the WiFi Video Downlink:


- 1. Switch on the remote controller.
- 2. Turn on the aircraft.
- 3. On your mobile device, select 'PHANTOM3_XXXXXX' from the WiFi network list, and enter the default password '12341234'.
- 4. Launch the DJI GO app and enter Camera View. A video signal from the aircraft's camera indicates that the aircraft has established a connection to the WiFi video downlink successfully.

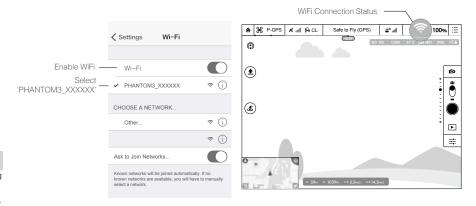

Refer to <u>DJI GO App</u> on page 32 for more information on how to change the SSID and password for the WiFi video downlink.


Resetting the WiFi Video Downlink

 Switch on the remote controller, turn the gimbal dial to the far right, and toggle the S2 switch back and forth for at least three times. The remote controller will sound a long beep if the SSID and password for the WiFi Video Downlink have been reset to their default values successfully.



Camera and Gimbal

This section provides the technical specifications of the camera and explains the gimbal's operation modes.

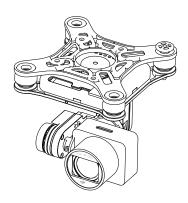


Camera and Gimbal

Camera

The on-board camera features a 1/2.3 inch CMOS sensor that captures up to 2.7k Ultra HD video at 30fps and 12 MP still photos. Video can be recorded in MOV or MP4 format, while stills can be saved in both JPEG and DNG formats. Shooting modes include burst, AEB and time-lapse. A live HD video feed from the camera can be viewed on your mobile device through the DJI GO app.

Video and Photo Storage


The Phantom 3 Standard comes with an 8 GB Micro SD, but also supports Micro SD cards with a capacity of up to 64 GB. It is recommended using a UHS-1 or Class 10 Micro SD card to minimize the delay when reading or writing high resolution image files.

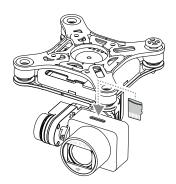

O DO NOT insert or remove the Micro SD card when the Phantom 3 Standard is turned on.

Downloading Videos and Photos

Connect the Phantom 3 Standard to your PC through the Camera Micro USB Port to access videos and photos stored on the Micro SD card.

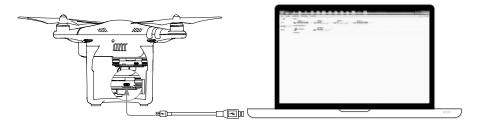

 \triangle The aircraft must be turned on in order to access the files on the Micro SD card.


Camera Status LED

The Camera Status LED lights up when the aircraft is turned on and provides information on the working status of the camera.

Blinking Pattern	Camera Status
© Blinks green quickly (0.1s on, 0.2s off)	System is warming up
© Blinks green once (0.4s on, 0.5s off)	Taking a single shot
© Blinks green three times (0.1s on, 0.3s off)	Taking 3/5/7 burst shots
Blinks red slowly (1.6s on, 0.8s off)	Recording video
Blinks red quickly (0.2s on, 0.5s off)	SD card error
Billinks red twice (0.1s on, 0.1s off X2)	Camera overheated
® Glows solid red	System error
© ® Blinks green and red alternatively (0.8s green, 0.8s red)	Firmware updating

Gimbal

The 3-axis gimbal provides a steady platform for the camera attached, allowing you to capture crisp, clear images. The gimbal can tilt the camera across a 120° range.

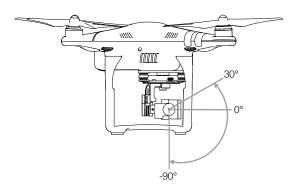

Use the gimbal dial on the remote controller to control the tilt motion of the camera.

Gimbal Operation Modes

Two gimbal operation modes are available. Switch between the different operation modes on the camera settings page of the DJI GO app. Note that your mobile device must be connected to the remote controller for changes to take effect. Refer to the table below for details:

	4	Follow Mode	The pitch angles of the gimbal and the aircraft stay the same.
	*	FPV Mode	The pitch and roll angles of the gimbal and the aircraft stay the same, providing a unique first-person view.




- Take off from a flat, open ground that will not interfere with the gimbal movement.
 A gimbal motor error may occur in these situations:
 - (1) The gimbal's motion is obstructed by the gimbal clamp or obstacles on the ground.
 - (2) The gimbal was subjected to an excessive external force such as a collision.
- Flying in heavy fog or clouds may make the gimbal wet, leading to a temporary failure. The gimbal will recover full functionality once it dries.

Anti-Drop Kit

The Phantom 3 Standards comes with two Anti-Drop Pins which help secure the gimbal and camera to the aircraft. To install additional pins, follow these steps:

Push the Anti-Drop Pin through the damper and the center of the ring. Press them together until you hear a click. Only 2 pins installed adjacent from each other are required during use.

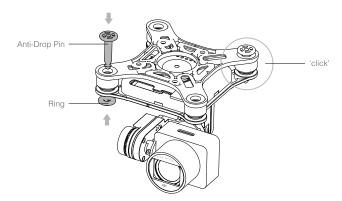

DJI GO App

This section introduces the four main pages in the DJI GO app.

DJI GO App

The DJI GO app is an essential hub to operate your DJI equipment, share your artwork, explore the community, and manage your DJI account, all at once. These features correspond to the four pages – Equipment, Library, Explore and Me - which are introduced in detail below.




Equipment

On the Equipment page, you can enter Camera View, visit the Academy or view your flight records.

Camera View

The Camera View is the main panel for operating your aircraft. The center of the screen contains a live HD video feed from the camera, and around it are icons and buttons that give you control over the aircraft and camera.

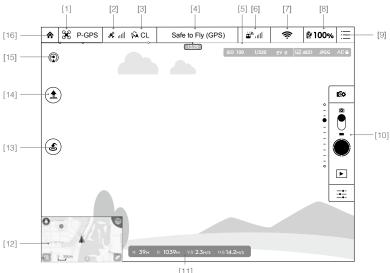

[1] Flight Mode

X: The current flight mode is displayed next to this icon.

Tap to enter the Main Controller Settings, where you can configure the parameters that affect flight behavior.

The aircraft is in Beginner Mode by default, and cannot fly 30 meters (98 feet) above or away from the Home Point. You can disable Beginner Mode in the Main Controller Settings.

[2] GPS Signal Strength

🎠 الله: Shows the current GPS signal strength. Green bars indicate an adequate GPS strength.

[3] IOC Settings

A CL: Displays the IOC settings when the aircraft is in F-Mode. Tap this icon to view the IOC menu and select the desired IOC mode.

[4] System Status Bar

Safe to Fly (GPS): Indicates the current aircraft system status and GPS signal strength.

[5] Battery Level Indicator

____ : Describes the battery level of the aircraft according to its immediate status. The colored zones represent the various thresholds of battery level. When the battery level drops below a certain threshold, the system will prompt the user to take the appropriate action.

[6] Remote Controller Signal

أاله Shows the signal strength of the remote controller.

[7] Video Downlink Signal

Shows the signal strength of the WiFi Video Downlink between the aircraft and the remote controller. Tap to set the SSID and connection password for the WiFi connection.

[8] Battery Level

*\bigode{100%} : Shows the current battery level. Tap to view the Aircraft battery menu, where you can view battery information and set the battery warning thresholds.

[9] General Settings

=: Tap to view the settings for the camera, mini-map and video cache.

[10] Camera Bar

Camera Operations

• Tap to enter various camera value settings, including color space for the recording, resolution of the videos, image size and so on.

Shutter (Photo)

Tap once to take a single photo. Tap and hold to switch between shooting modes.

Shutter (Video)

: Tap to start or stop recording video.

Playback

Tap to play back photos and videos on the Micro SD card.

Camera Settings

-•- : Tap to set the ISO, shutter speed and auto exposure values.

[11] Flight Telemetry

The radar-like object indicates the aircraft's attitude. Tap to bring up the Map.

- (1) The red arrow indicates the aircraft's heading.
- (2) The ratio between the blue and gray areas indicates the aircraft's pitch.
- (3) The horizontal level of the blue-gray boundary indicates the aircraft's roll angle.

[12] Map

Shows the current position of the aircraft. Tap the map to switch from Camera View to Map View.



[13] Return-to-Home (RTH)

💰 : Initiates the RTH procedure. Tap to bring the aircraft back to the last recorded Home Point.

[14] Auto Takeoff/Landing

★/★: Tap to initiate auto takeoff or landing.

[15] Livestream

①: Indicates that a video feed is being broadcast live on YouTube. Be sure that your mobile device is connected to the internet.

[16] Back

?: Tap to return to the main menu.

Library

View, edit and share your artwork all in one place. The Library has a range of simple but powerful tools that let you edit your videos and photos before sharing them online, minutes after they are captured.

Explore

Find out about our latest events, featured products and trending Skypixel uploads in the Explore page.

Me

If you already have a DJI account, you will be able to participate in forum discussions, earn Credits in the DJI Store, and share your artwork with the community.

Flight

This section describes safe flight practices and flight restrictions.

Flight

Once pre-flight preparation is complete, it is recommended that you use the flight simulator in the DJI GO app to practice flying or have an experienced pilot accompany you for supervision. Ensure that all flights are carried out in an open area.

Flying Conditions

- DO NOT use the aircraft in adverse weather conditions including rain, snow, fog, and wind speeds exceeding 10 m/s.
- Only fly in open areas. Tall buildings and steel structures may affect the accuracy of the onboard compass and GPS signal.
- 3. Avoid flying near obstacles, crowds, high voltage power lines, trees and bodies of water.
- Avoid flying in area with high levels of electromagnetism, including mobile phone base stations and radio transmission towers.
- Aircraft and battery performance is subject to environmental factors such as air density and temperature. Be very careful when flying over 19685 feet (6000 m) above sea level as the battery and aircraft performance may be reduced.
- 6. The Phantom 3 Standard cannot operate in P-Mode within the Earth's polar regions.


Flight Limits and No Fly Zones

Unmanned aerial vehicle (UAV) operators should abide by the regulations from self-regulatory organizations such as the International Civil Aviation Organization (ICAO), the Federal Aviation Administration (FAA) and their local aviation authorities. For safety reasons, flight limits are enabled by default to help users use this product safely and legally.

When operating the aircraft in P-Mode, the altitude limit, radius limit and No Fly Zones work together to bound the aircraft. In A-Mode, the aircraft cannot exceed altitudes of 400 feet (120 m).

Altitude and Radius Limits

The pilot can set the altitude and radius limits in the DJI GO app to create a cyliderical geo-fence to bound the aircraft. The tables below show the details of these limits.

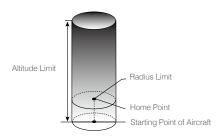

Strong GPS Signal G · · · · · Flashing Green			
	Flight Limits	DJI GO App	Aircraft Status Indicator
Max Height	Flight altitude must be below the preset height.	Warning: Height limit reached.	None.
Max Radius	Flight distance must be within the max radius.	Warning: Distance limit reached.	Flashes red rapidly when the aircraft approaches the max radius limit.

Weak GPS Signal 💯 · · · · · Flashing Yellow			
	Flight Limits	DJI GO App	Aircraft Status Indicator
Max Height	Flight height restricted to Max Height under 400 ft (120 m).	Warning: Height limit reached.	None.
Max Radius	No limit		




- If you fly out of bounds, you can still control the aircraft, but cannot fly it further.
- If the aircraft loses GPS signal and flies out of the max radius but regains GPS signal afterwards, it will fly back within range automatically.

No Fly Zones

All No Fly Zones are listed on the DJI official website at http://flysafe.dji.com/no-fly. No Fly Zones are divided into Airports and Restricted Areas. Airports include major airports and flying fields where manned aircraft operate at low altitudes. Restricted Areas include borders between countries or sensitive sites. The details of the No Fly Zones are explained below.


Airports (Requires GPS):

- Airport No Fly Zones are comprised of Takeoff Restricted Zones and Restricted-Altitude Zones. Each
 type of zone encompasses a radius of a certain size.
- The radius R1 depends on the shape and size of the airport, and is an area around the airport that is a Takeoff Restricted Zone, inside of which takeoff and flight is inhibited.
- 3. From R1 to R1+1 miles around the airport, the flight altitude is limited on a 15 degree incline, starting at 66 feet (20 m) from the edge of airport and radiating outwards. The flight altitude is limited to 1640 feet (500 m) at R1+1 miles.
- 4. When the aircraft is within 320 feet (100 m) of a no-fly zone, a warning message will appear in the DJI GO app.

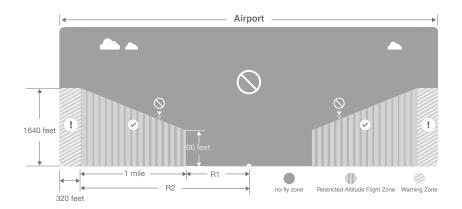

Restricted Areas (Requires GPS):

- 1. Restricted Areas do not have a Restricted-Altitude Flight Zone.
- 2. The radius R around the designated Restricted Area is a Takeoff Restricted Area. Aircraft cannot take off within this zone. The value of R depends of the shape and size of the Restricted Area.
- 3. A Warning Zone is set on the perimeter of the Restricted Area. When the aircraft is within 0.062 miles (100 m) of the no-fly zone (inside the Warning Zone), a warning message will appear in the DJI GO app.

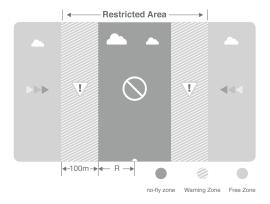

No Fly Zone: Areas introduced by DJI with restricted flight to help the pilot fly safely and legally. no-fly zone: The area within a No Fly Zone in which the aircraft is inhibited from any kind of flight.

Strong GPS Signal G Flashing Green			
Zone	Restrictions	DJI GO App Warning	Aircraft Status Indicator
	Motors will not start.	Warning: You are in a no-fly zone. Takeoff prohibited.	
No Fly Zone	If the aircraft loses GPS signal and enters the restricted area but regains GPS signal afterwards, the aircraft will enter Semi-Automatic Descent and land itself.	Warning: You are in a no-fly zone. Automatic landing has begun. (If the aircraft is within R1)	
Restricted- Altitude Flight Zone	If the aircraft loses GPS signal and enters the restricted area but regains GPS signal afterwards, it will descend to a safe altitude and hover 15 feet below the safe altitude.	Warning: You are in a restricted zone. Descending to a safe altitude. (If the aircraft is outside R1 but within R2) Warning: You are in a restricted zone. Max flight altitude restricted between 20 m and 120 m. Fly Cautiously.	Flashes red
Warning Zone	No flight restrictions.	Warning: You are approaching a Restricted Area. Fly cautiously.	
Free Zone	No flight restrictions.	None.	None.

Semi-Automatic Descent: All stick commands are available except the throttle stick command during the descent and landing process. Motors will stop automatically after landing.



- When flying in a No Fly Zone, the Aircraft Status Indicator will flash red rapidly and continue for 3 seconds, then switch to indicate the current flying status and continue for 5 seconds, at which point it will switch back to flashing red rapidly.
- For safety reasons, please DO NOT fly close to airports, highways, railway stations, railway lines, city centers or other busy areas. Try to ensure the aircraft is visible at all times.

Pre-flight Checklist

- 1. The remote controller, Intelligent Flight Battery, and your mobile device are fully charged.
- 2. Propellers are mounted correctly and firmly.
- 3. The Micro SD card is inserted, if necessary.
- 4. The gimbal is functioning normally.
- 5. Motors start properly and are functioning as normal.
- 6. The DJI GO app is connected to the remote controller.

Calibrating the Compass

IMPORTANT: Always calibrate the compass in every new flight location. The compass is very sensitive to electromagnetic interference, which can produce abnormal compass data and lead to poor flight performance or flight failure. Regular calibration is required for optimal performance.

Ensure the compass is calibrated. If you did not calibrate the compass as part of your pre-flight preparations, or if you have moved to a new location since the last calibration.




- DO NOT calibrate your compass where there is any possibility of strong magnetic interference.
 Sources of potential interference include magnetite, parking structures, and subterranean metal structures.
- DO NOT carry ferromagnetic materials with you during calibration such as keys or cellular phones.
- DO NOT calibrate in direct proximity to large metal objects.
- DO NOT calibrate indoors.


Calibration Procedures

Choose an open space to carry out the following procedures:


- 1. Go to the DJI GO app > Camera View > Aircraft Status Bar (top of the screen). Next to 'Compass', tap Calibrate. Alternatively, flip the S1 switch quickly for more than 3 times. The Aircraft Status Indicator will change from flashing yellow to solid yellow when the aircraft is ready for compass calibration.
- Hold the aircraft upright and rotate it 360 degrees along the central axis. The Aircraft Status Indicator will change from solid yellow to solid green when complete.

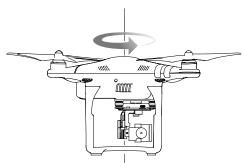

 Hold the aircraft with its camera facing down, and rotate it 360 degrees along its central axis. The Aircraft Status Indicator will change from solid green to flashing yellow when complete. The calibration is successful.



 4. If the Aircraft Status Indicator becomes solid red, the calibration is unsuccessful. Repeat the steps above to recalibrate the compass.



Calibrate the compass after you launch the DJI GO app if you are prompted to do so.

When to Calibrate

- The Aircraft Status Indicator is flashing red and yellow alternatively, indicating that the compass data is abnormal.
- 2. Flying in a new location that is different from your last flight.
- 3. The physical structure of the aircraft has been changed.
- 4. There is severe drifting during flight (i.e. the aircraft has difficulty flying in a straight line).

Auto Takeoff and Landing

Auto Takeoff

To use Auto Takeoff:

- 1. Launch the DJI GO app and enter Camera View.
- 2. Ensure that the aircraft is in P-Mode (switch S1 is in the uppermost position).
- 3. Go through the pre-flight checklist.
- 4. Tap
 and slide Confirm to take off.
- 5. The aircraft will take off and hover 1.2 meters above the ground.

Auto Landing

To use Auto Landing:

- 1. Ensure that the aircraft is in P-Mode (switch S1 is in the uppermost position).
- 2. Check that the landing area is clear before tapping $\frac{1}{2}$ to land the aircraft.
- 3. The aircraft will begin to land automatically.
 - Only use Auto Takeoff or Landing if there is a strong GPS signal.

Starting and Stopping the Motors

The Combination Stick Command (CSC) illustrated below is used to start or stop the motors. Ensure you perform the CSC command in one continuous motion.

Starting the Motors

A Combination Stick Command (CSC) is used to start the motors. Push both sticks to the bottom inner or outer corners to start the motors. Once the motors have started spinning, release both sticks simultaneously.









Stopping the Motors

There are two methods to stop the motors.

Method 1: When the aircraft has landed, push the throttle stick down, then perform the CSC command to stop the motors. Release both sticks once the motors have stopped.

Method 2: When the aircraft has landed, push the throttle down and hold. The motors will stop after 3 seconds.













Method 2

↑ DO NOT perform the CSC command when the aircraft is flying in mid-air.

Method 1

Flight Test

Takeoff and Landing Procedures

- 1. Place the aircraft on an open, flat ground with the battery indicator facing towards you.
- 2. Power on the remote controller and your mobile device, and then the Intelligent Flight Battery.
- 3. Launch the DJI GO app and enter Camera View.
- 4. Wait until the Aircraft Status Indicator flashes green. This means the Home Point has been recorded and it is safe to fly. If it flashes yellow, the Home Point has not been recorded and you must not take off.
- 5. Slowly push the throttle stick up or use Auto Takeoff to take off.
- 6. To land, hover over a level surface and gently pull down on the throttle stick to descend slowly.
- 7. After landing, execute the CSC command or push the throttle stick down for 3 seconds until the motors come to a stop.
- 8. Turn off the Intelligent Flight Battery, followed by the remote controller.



- When the Aircraft Status Indicator flashes yellow rapidly during flight, the aircraft has entered the Failsafe mode.
- The Aircraft Status Indicators will flash red slowly to indicate a Low Battery Level Warning, and flash red rapidly to indicate a Critically Low Battery Level Warning.

Tips for Shooting Aerials

- 1. Go through the pre-flight checklist before each flight.
- 2. Select the desired gimbal operation mode in the DJI GO app.
- 3. Shoot video when flying in P-Mode whenever possible.
- 4. Always fly in good weather and avoid rain or strong winds.
- 5. Choose a suitable recording format for the camera and adjust the settings for ISO, exposure, etc.
- 6. Perform test flights to establish flight routes and locate interesting scenes.
- 7. Move the control sticks gently to keep the aircraft's movement smooth and stable for the best shots.

FAQ

In this section, we'll try our best to answer all your questions.

FAQ

How far can I fly my Phantom 3 Standard?

The signal transmission distance will vary depending on environmental conditions and local regulations, but the Phantom 3 Standard can reach distances of up to 0.62 miles (1 km) away from the pilot.

What is the Phantom 3 Standard's maximum flight time?

Flight time will vary depending on environmental conditions and usage patterns, but the Intelligent Flight Battery is designed to provide up to 25 minutes of uninterrupted flight time when fully charged.

What app should I use with my Phantom 3 Standard?

The Phantom 3 Standard is compatible with the DJI GO app for iOS and Android, which is also used for other DJI products. The app will detect which aircraft is connected and automatically adjust accordingly.

Where can I get the DJI GO app?

The DJI GO app is free to download from the Apple App Store or Google Play. Search for "DJI GO" and download/install the app as usual.

Which mobile devices are compatible with the app?

The DJI GO app is only compatible with devices running iOS 8.0 or Android v4.1.2, or later versions. A full list of suggested deceives can be found on the Phantom 3 Standard webpage at "DJI.com".

How do I connect to the DJI GO app?

The Phantom 3 Standard connects to the DJI GO app on your mobile device via its own WiFi network. First power on your Phantom 3 Standard and remote controller. Then connect your mobile device to the dedicated "PHANTOM3" WiFi network, and open the DJI GO app. Details can be found in the user manual.

How can I ensure that my pictures and videos will be synchronized to my iOS album?

You may need to adjust the settings of your mobile device. Open the Settings menu, select the Privacy tab, select the Photos tab, and then toggle the switch next to the DJI GO app icon. If the GO app has not been granted access to your albums, the photos and videos cannot be synchronized.

How do I use the automatic video editor?

There is an automatic video editor built into the DJI GO app. After recording several video clips, simply tap "Library" from the app's home screen. You can then select your clips and a template, which are automatically combined to create a short film that can be shared immediately.

Do I have to buy the remote controller separately?

No, there is no need to buy a separate remote controller. Your Phantom 3 Standard comes with a custombuilt remote controller that is already linked to the aircraft.

Does my Phantom 3 Standard support dual Remote Controllers?

No. The included Remote Controller can be used to control both the aircraft and the gimbal tilt at the same time.

How do I change the control mode of my Phantom 3 Standard?

By default, the remote controller is set to Mode 2. This means that the left stick controls the throttle and orientation of the aircraft and the right stick controls the movement of the aircraft. You can switch to other standard modes or configure a custom mode under RC Settings in the DJI GO app.

What do the switches on the top of the remote controller do?

These switches are called the S1 and S2 switches.

The S1 switch allows you to change between advanced flight modes, including P-Mode, A-Mode, and F-Mode. More information about these modes can be found in the user manual. Beginners should keep this switch in the uppermost position (P-Mode) when flying.

The S2 switch can be used to trigger Return-to- Home. When flying, simply toggle this switch up and down several times to tell your Phantom 3 Standard to return to the Home Point and land.

Can I remove the camera and attach my own?

No. The camera that comes with the Phantom 3 Standard is permanently attached. Attempting to remove, replace, or modify the camera may damage the product and will void your warranty.

Can I use a Phantom 2 Intelligent Flight Battery with the Phantom 3 Standard?

No. The Phantom 3 series uses a newly designed Intelligent Flight Battery with greater power. The new 4-cell battery has a capacity of 4480 mAh and voltage of 15.2 V.

Can I use a Phantom 3 Professional/Advanced Intelligent Flight Battery with the Phantom 3 Standard?

Yes, the Phantom 3 series batteries are the same.

Why is the number of discharges for the Intelligent Flight Battery not zero, even though I have never used it?

Every Intelligent Flight Battery is tested prior to being packaged and shipped. This affects the discharge time of a new battery and is the reason that the discharge time displayed in the DJI GO app is not zero. The battery is safe to use.

My Phantom 3 Standard does not turn off right away, is something wrong?

This is normal. After you release the power button, the Intelligent Flight Battery may remain on for a few seconds while any video data is saved to the Micro SD card. This helps prevent your data from being lost or corrupted.

How can I restore a video file if the power is turned off during recording?

Insert the Micro SD card into the camera and turn on the Phantom 3 Standard. Wait approximately 30 seconds for the video file to be restored.

What should I do to land my Phantom 3 smoothly as possible?

Hover the aircraft over a flat, level surface. Slowly pull the throttle stick down until the aircraft touches the ground.

How can I safely operate the aircraft when encountering compass error?

A compass error may occur when the aircraft is flying close to strong electric magnetic sources (e.g. power lines and radio base stations). The Aircraft Status Indicators will blink red and yellow rapidly when a compass error occurs and the DJI GO app will display one of the following messages:

- Compass error, calibration required
 This warning message indicates the aircraft is receiving abnormal compass readings. It is recommended that you land the aircraft and recalibrate the compass at a different location. Resume flight in a different area when possible.
- Compass error, exiting P-GPS Mode
 This warning message indicates that the aircraft is drifting severely. Bring the aircraft to a higher altitude to acquire connections with enough GPS satellites when this warning message appears. The flight controller will automatically adjust the heading of the aircraft to mitigate the drifts. The aircraft will switch back to P-GPS mode when these adjustments are complete.

Appendix

Everthing else you need to know.

Appendix

Specifications

Weight (Incl. Battery and Propellers) 1216 g Weight (Incl. Battery and Propellers) 5 m/s Max Ascent Speed 3 m/s Max Descent Speed 3 m/s Max Speed 16 m/s (A-Mode, no wind) Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Angular Vibration Range ±0.02° Angular Vibration Range ±0.02° Camera 1/2.3° Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Still Photography Modes Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30, 48/50/60 Max	Aircraft		
Propellers) 1216 g Max Ascent Speed 5 m/s Max Descent Speed 3 m/s Max Speed 16 m/s (A-Mode, no wind) Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Cortrollable Range Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Variant System Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/800 s Max Image Size 4000 x 3000 pixels Still Photography Modes Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse Video Recording Modes PhD: 1920x1080p 24/25/30 Hot: 280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT			
Max Ascent Speed 5 m/s Max Descent Speed 3 m/s Max Speed 16 m/s (A-Mode, no wind) Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Angular Vibration Range #10.02° Angular Vibration Range #12.3° Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s - 1/8000 s Max Image Size 4000 x 3000 pixels Still Photography Modes Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2-7K: 2704x1520p30 HD: 1280x720p 24/25/30 Video Recording Modes HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported Fle Formats Photo: JPEG, DNG <td< td=""><td>9 (</td><td>1216 g</td></td<>	9 (1216 g	
Max Descent Speed 3 m/s Max Speed 16 m/s (A-Mode, no wind) Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Still Photography Modes Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 HD: 1280x720p 24/25/30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Micro SD, Max Capacity: 64GB. Class		E m/a	
Max Speed 16 m/s (A-Mode, no wind) Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s - 1/8000 s Max Image Size 4000 x 3000 pixels Still Photography Modes Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse Video Recording Modes FHD: 1920x1580p 24/25/30 Video Recording Modes FHD: 1920x1080p 24/25/30 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB.	·		
Max Altitude Above Sea Level 6000 m Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Tontrollable Range Controllable Range pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Tolan Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 Video Recording Modes FHD: 1920x1080p 24/25/30 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or hig	·		
Max Flight Time Approx. 25 min Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Forman 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 Max Video Bitrate 40 Mbps FAT32/exFAT Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed,	·	,	
Operating Temperature 0° to 40° C GPS System Built-in GPS Gimbal Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Commera Sensor 1/2.3° Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Aircraft/FAT Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitu			
GPS System Built-in GPS Gimbal Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Sensor 1/2.3" Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse Z-7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1920x1080p 24/25/30, HB: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m Ce: 500 m	9		
Gimbal Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera *** Sensor 1/2.3" Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) 1/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30 hD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	, 9 ,	- 10 12 -	
Controllable Range Pitch: -90° to +30° Angular Vibration Range ±0.02° Camera Sensor 1/2.3" Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Still Photography Modes Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	,	Built-in GPS	
Angular Vibration Range Camera Sensor 1/2.3" Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)			
Camera Sensor 1/2.3" Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Stingle shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	ō		
Sensor1/2.3"Photo Resolution12 MegapixelsLens94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ISO Range100-3200 (video); 100-1600 (photo)Electronic Shutter Speed8 s - 1/8000 sMax Image Size4000 x 3000 pixelsSingle shotPhoto burst mode: 3/5/7 shotsPhoto burst mode: 3/5/7 shotsAuto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse2.7K: 2704x1520p30Video Recording ModesFHD: 1920x1080p 24/25/30Max Video Bitrate40 MbpsFAT32/exFATSupported File FormatsPhoto: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264)Supported SD Card TypesMicro SD, Max Capacity: 64GB. Class 6 or higherOperating Temperature0° to 40° CWiFiOperating Frequency2.400 GHz - 2.483 GHzMax Transmission DistanceFCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		±0.02°	
Photo Resolution 12 Megapixels Lens 94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Camera		
Lens94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞ISO Range100-3200 (video); 100-1600 (photo)Electronic Shutter Speed8 s -1/8000 sMax Image Size4000 x 3000 pixelsStill Photography ModesSingle shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30Video Recording ModesFHD: 1920x1080p 24/25/30 HD: 1920x1080p 24/25/30/48/50/60Max Video Bitrate40 Mbps FAT32/exFATSupported File FormatsPhoto: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264)Supported SD Card TypesMicro SD, Max Capacity: 64GB. Class 6 or higherOperating Temperature0° to 40° CWiFiOperating Frequency2.400 GHz - 2.483 GHzMax Transmission DistanceFCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Sensor	1/2.3"	
ISO Range 100-3200 (video); 100-1600 (photo) Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Photo Resolution	12 Megapixels	
Electronic Shutter Speed 8 s -1/8000 s Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Lens	94° FOV, 20 mm (35 mm format equivalent) f/2.8, focus at ∞	
Max Image Size 4000 x 3000 pixels Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency Aux Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	ISO Range	100-3200 (video); 100-1600 (photo)	
Still Photography Modes Single shot Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency Aux Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Electronic Shutter Speed	8 s -1/8000 s	
Still Photography Modes Photo burst mode: 3/5/7 shots Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency Aux Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Max Image Size	4000 x 3000 pixels	
Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		Single shot	
Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias Time-lapse 2.7K: 2704x1520p30 Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Still Photography Modos	Photo burst mode: 3/5/7 shots	
2.7K: 2704x1520p30	Still Friotography Modes	Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7EV bias	
Video Recording Modes FHD: 1920x1080p 24/25/30 HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		Time-lapse	
HD: 1280x720p 24/25/30/48/50/60 Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		2.7K: 2704x1520p30	
Max Video Bitrate 40 Mbps FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Video Recording Modes	FHD: 1920x1080p 24/25/30	
FAT32/exFAT Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		HD: 1280x720p 24/25/30/48/50/60	
Supported File Formats Photo: JPEG, DNG Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Max Video Bitrate	40 Mbps	
Video: MP4/MOV (MPEG-4 AVC/H.264) Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		FAT32/exFAT	
Supported SD Card Types Micro SD, Max Capacity: 64GB. Class 6 or higher Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Supported File Formats	Photo: JPEG, DNG	
Operating Temperature 0° to 40° C WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		Video: MP4/MOV (MPEG-4 AVC/H.264)	
WiFi Operating Frequency 2.400 GHz - 2.483 GHz Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Supported SD Card Types	Micro SD, Max Capacity: 64GB. Class 6 or higher	
Operating Frequency 2.400 GHz - 2.483 GHz FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Operating Temperature	0° to 40° C	
Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	WiFi		
Max Transmission Distance FCC: 1000 m; CE: 500 m (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)	Operating Frequency	2.400 GHz - 2.483 GHz	
Max Transmission Distance (outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)			
	Max Transmission Distance	•	
	Transmitter Power (EIRP)		

Remote Controller			
Operating Frequency	5.725 GHz - 5.825 GHz, 922.7 MHz - 927.7 MHz (Japan)		
M T	FCC: 1000 m; CE: 500 m		
Max Transmission Distance	(outdoors and unobstructed, aircraft's altitude at 400 feet/120 m)		
Operating Temperature	0° to 40° C		
Battery	2600 mAh LiPo 18650		
Transmitter Power (EIRP)	FCC: 19 dBm; CE: 14 dBm		
Operating Voltage	600 mA @ 3.7V		
Charging Port	Micro USB		
Battery Charger			
Output Voltage	17.4 V		
Rated Power	57 W		
Intelligent Flight Battery (PH3 - 4480 mAh - 15.2 V)			
Capacity	4480 mAh		
Voltage	15.2 V		
Battery Type	LiPo 4S		
Energy	68 Wh		
Net Weight	365 g		
Operating Temperature	-10° to - 40° C		
Max Charging Power	100 W		

Aircraft Status Indicator Blinking Patterns

Normal Operations	
$\textcircled{B} : \textcircled{G} : \textcircled{\cdots} \cdots \textbf{Flashes red, green and yellow alternatively}$	Powered on and self-testing
© Flashes green and yellow alternatively	Aircraft warming up
© ······Flashes green slowly	Safe to Fly (P-Mode with strong GPS signal)
: Flashes yellow slowly	Safe to Fly (A-Mode without GPS signal)
Warnings	
: Hashes yellow quickly	Remote controller signal lost
® ····· Flashes red slowly	Low Battery Warning
®·····Flashes red quickly	Critically Low Battery Warning
(Alternates with other patterns)	IMU eror
: — Glows solid red	Critical error
® : Flashes red and yellow alternatively	Compass calibration required

Intelligent Orientation Control (IOC)

IOC allows the pilot to lock the orientation of aircraft in different fashions. It has three working modes you can choose from in the DJI GO app. IOC only works in F-Mode, and you must toggle the S1 switch to the F-Mode (lowest position) to activate IOC. The three work modes are:

Course Lock (CL)	Lock the current nose direction as the aircraft's forward direction. The aircraft will move in the locked directions regardless of its orientation (yaw angle). Tap Reset IOC to reset the Course Lock.
Home Lock (HL)*	Record a Home Point, and push the Pitch stick up/down to control the distance of the aircraft from the Home Point.
Point of Interest (POI)*	Record a Point of Interest (POI). The aircraft's nose always points towards the POI.



*The Home Lock and Point of Interest modes are due for release soon.

IOC Requirements

IOC will only work under the following conditions:

IOC Mode	GPS Enabled	Satellite Count	Aircraft Distance
Course Lock	No	None	Any
Home Lock	Yes	% iii	Aircraft \longleftrightarrow 10m Home Point
POI	Yes	% III	Aircraft \leftarrow 5m-500m \rightarrow Point of Interest

Enabling IOC

Launch the DJI GO app > Camera View > $\frac{1}{3}$ > Advanced Settings > Enable IOC. On the remote controller, toggle the S1 Switch to the lowest position (F-Mode) to use IOC.

FCC Compliance

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Compliance Information

FCC Warning Message

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

IC RSS warning

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent areil est conforme aux CNR d'Industrie Canada licables aux areils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'areil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'areil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement:

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KCC Warning Message

"해당무선설비는 운용 중 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다 ." "해당 무선설비는 운용 중 전파혼신 가능성이 있음"

NCC Warning Message

低功率電波輻射性電機管理辦法

第十二條經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅自變更頻率、加 大功率或變更原設計之特性及功能。

第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應改善至無 干擾時方得繼續使用。前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法 通信或工業、科學及醫療用電波輻射性電機設備之干擾。

The content is subject to change.

Download the latest version from http://www.dji.com/product/phantom-3-standard



If you have any questions about this document, please contact DJI by sending a message to ${\bf DocSupport@dji.com}.$