



Compatibility Chart

Last update: Oct 2013

Canon DSLR Cameras

	EOS 1Dx	EOS 1D Mark II (N)	EOS 1D Mark III	EOS 1D Mark IV	EOS 5D	EOS 5D Mark III	EOS 5D Mark II	EOS 6D	EOS 7D	EOS 10D	EOS 20D	EOS 30D	EOS 40D	EOS 50D	EOS 60D	EOS 70D	EOS 100D	EOS 300D (Rebel X)	EOS 350D (Rebel XT)	EOS 400D (Rebel XTi)	EOS 450D (Rebel XSi)	EOS 500D (Rebel T1i)	EOS 550D (Rebel T2i)	EOS 600D (Rebel T3i)	EOS 650D (Rebel T4i)	EOS 700D (Rebel T5i)	EOS 1000D (Rebel XS)	EOS 1100D (Rebel T)	PowerShot G7 / G9 / G10	PowerShot G11	PowerShot S5 IS	PowerShot SX1 IS	PowerShot SX10 IS	PowerShot SX20 IS	EOS M		
--	---------	--------------------	-----------------	----------------	--------	-----------------	----------------	--------	--------	---------	---------	---------	---------	---------	---------	---------	----------	--------------------	---------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	---------------------	-------------------------	---------------	-----------------	------------------	-------------------	-------------------	-------	--	--

Nissin Model

MG8000 Extreme	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○		
MF18	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○		
Di866 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○		
Di866	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○		
Di700	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○		
Di600	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○		
Di622 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○		
Di622	○	○	○	○	●	○	○	○	●	●	●	●	●	●	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○			
Di466	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	○	○	●	●	●	●	●	●	●	○	●	●	●	○	○	○	○	○			
Di28	○	○	○	○	●	○	●	○	●	●	●	●	●	●	○	●	●	●	●	●	●	○	●	●	○	●	○	○	○	○	○	○				

- Compatible Model
- Firmware update is required
- Hi-Speed is not supported
- Hi-Speed & 2nd Curtain not supported

Sony DSLR Cameras

	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A65	Alpha SLT A77	Alpha SLT A99	NEX-6	NEX-7	RX1	
--	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	---------------	----------------	---------------	---------------	---------------	---------------	-------	-------	-----	--

Nissin Model

[illegible]

- Compatible Model
- Firmware update is required
- Firmware update is required + Use the Sony Shoe Adaptor (ADP-MAA)

