

# AUTO LENS ADAPTER

## USER MANUAL

LAE-MFT-CEFA

Canon EF/EF-S Lens to  
Micro Four Thirds Mount



## THANK YOU FOR CHOOSING VELLO

This Vello Lens Adapter is for attaching Canon EF and EF-S lenses to a Micro Four Thirds mount. It supports autofocus (AF) with select Canon lenses, and maintains auto exposure (AE) as well as aperture control with most other lenses. The adapter also delivers metadata for your pictures.

The inside of the adapter is coated to reduce any stray reflections and maximize picture quality. The tripod foot is detachable and has a 1/4-inch socket for attaching to most tripods.



## CONTENTS

- Vello LAE-MFT-CEFA  
Lens Adapter for Canon  
EF/EF-S lens to Micro  
Four Thirds mount
- Front and Rear Caps
- Removable Tripod Foot
- User Manual




## PRECAUTIONS

- Please read and follow these instructions, and keep this manual in a safe place.
- Avoid sandy or dusty environments when using this adapter.
- Handle the adapter with care—don't drop it, and avoid bumps and shocks.
- Clean the adapter by wiping it with a soft, dry cloth.
- Do not use solvents such as benzene, alcohol, or detergents to clean the adapter.
- Be sure to read the operating instructions for your digital camera.

- Keep this unit away from children.
- Keep this unit away from water and flammable gases or liquids.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Vello will not be responsible for any damage.
- Handle the unit with care.
- All images are for illustrative purposes only.

## OVERVIEW

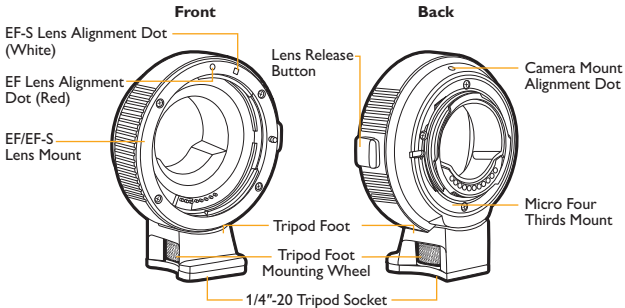

## MOUNTING THE LENS ADAPTER

1. Turn the camera's power off and remove all caps before mounting. Line up the alignment dots and carefully insert the adapter.



2. Rotate the adapter clockwise until it locks into place.



3. Line up the alignment dots on the lens and the adapter. Then carefully insert the lens into the adapter.



4. Rotate the lens clockwise until it locks.



5. Turn your camera on.



## REMOVING THE LENS ADAPTER

1. Turn the camera's power off.
2. Press and hold the release pin on the lens adapter, and rotate the lens counterclockwise to detach.



3. Press and hold the lens release button on the camera.



4. Rotate the lens adapter counterclockwise to release, and carefully detach the lens adapter from the camera.



5. Reattach the lens adapter's front and rear caps.

## MOUNTING THE TRIPOD COLLAR

1. Align the tripod foot's mounting screw with the mounting hole on the bottom of the lens adapter.



2. Carefully rotate the tripod foot's mounting wheel clockwise until the foot is securely attached.



## REMOVING THE TRIPOD COLLAR

Rotate the mounting wheel counterclockwise until the collar is loose enough to remove from the lens adapter.



*Note: If your lens has a built-in tripod collar, use the collar on the lens to mount the assembly to the tripod.*

## SPECIFICATIONS

<b>Compatible Lenses</b>	Canon EF and EF-S
<b>Compatible Cameras</b>	Micro Four Thirds System
<b>Front Mount</b>	Canon EF/EF-S
<b>Rear Mount</b>	Micro Four Thirds
<b>Tripod Foot</b>	1/4-20 inch socket
<b>Dimensions with Tripod Foot (H × W × D)</b>	3.25 × 2.75 × 1.4 inches (8.3 × 7 × 3.5 cm)
<b>Weight</b>	7.6 oz. (217 g)

## ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group.

© 2017 Gradus Group LLC. All Rights Reserved.



[www.vellogear.com](http://www.vellogear.com)

All other trademarks are the property of their respective owners.  
© Copyright 2017 Gradus Group

GG2