

AUTOFOCUS LENS ADAPTER

USER MANUAL

LAE-SE-CEF

Canon EF/EF-S Lens to Sony E-mount



THANK YOU FOR CHOOSING VELLO

The Vello Autofocus Lens Adapter allows for attachment of Canon EF and EF-S lenses to Sony's E-mount cameras. It maintains autofocus and autoexposure with AF-compatible Canon lenses. The lens adapter is all-metal construction, and the inside is coated to reduce internal reflections. The

tripod foot is detachable and will work with most brands of ball heads.

Note: For autofocus use lenses with an Ultrasonic or STM focusing motor.

The LAE-SE-CEF autofocus and autoexposure will not work with the Sony PXW-FS7 XDCAM camcorder.



CONTENTS

- Vello LAE-SE-CEF
Autofocus Lens Adapter
for Canon EF/EF-S Lens
to Sony E-mount.
- Front and Rear Caps
- Removable Tripod Collar
- User Manual




PRECAUTIONS

- Avoid sandy or dusty environments when using this adapter.
- Handle the adapter with care—don't drop it, and avoid bumps and shocks.
- Clean the adapter by wiping it with a soft, dry cloth.
- Do not use solvents such as benzene, alcohol, or detergents to clean the adapter.
- Be sure to read the operating instructions for your digital camera.
- Keep this unit away from children.
- Keep this unit away from water and flammable gases or liquids.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Vello will not be responsible for any damage.

- Handle the unit with care.
- Use only parts provided by the manufacturer.
- Please read and follow these instructions, and keep this manual in a safe place.
- All images are for illustrative purposes only.

OVERVIEW

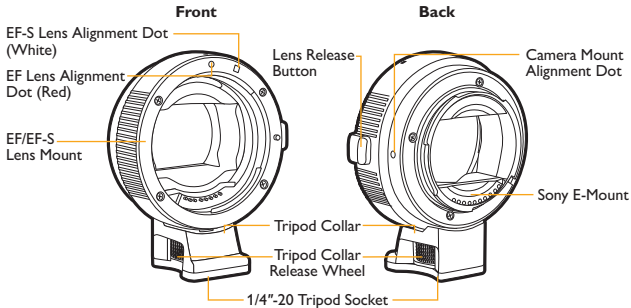

MOUNTING THE LENS ADAPTER

Note: Place the lens and camera on a stable, flat surface when mounting or removing the lens adapter.

1. Turn the camera's power off.
2. Remove all caps before mounting.



3. Line up the white alignment dots on the lens adapter and the camera.
4. Carefully insert the lens adapter into the camera, and rotate clockwise until it locks into place.

5. Line up the alignment dot on the lens with the alignment dot on the lens adapter. ◀



6. Carefully insert the lens into the lens adapter, and rotate the lens clockwise until it locks into place. ◀



REMOVING THE LENS ADAPTER

1. Turn the camera's power off.
2. Press and hold the release button on the lens adapter.



3. Rotate the lens counterclockwise to release, and carefully detach the lens from the lens adapter.
4. Reattach the front cap to the lens adapter.



5. Press and hold the lens release button on the camera.



6. Rotate the lens adapter counterclockwise to release, and carefully detach the lens adapter from the camera.



7. Reattach the rear cap to the lens adapter.

MOUNTING THE TRIPOD COLLAR

1. Align the tripod collar's mounting screw with the mounting hole on the bottom of the lens adapter.



2. Carefully rotate the tripod collar's mounting wheel clockwise until the collar is securely attached to the lens adapter.



REMOVING THE TRIPOD COLLAR

To remove the tripod collar, rotate the mounting wheel counterclockwise until the collar is loose enough to remove from the lens adapter.



Note: If your lens has a built-in tripod collar, use the collar on the lens to mount the assembly to the tripod.

SPECIFICATIONS

Compatible lenses	Canon EF and EF-S lenses (For autofocus use lenses with an Ultrasonic or STM focusing motor)
Compatible cameras	Sony E-mount
Front mount	Canon EF/EF-S mount
Rear mount	Sony E-mount
Tripod foot	1/4"-20 threaded socket
Dimensions (H × W × D)	3.3" × 2.8" × 1.8" (8.3 × 7 × 4.6 cm)
Weight	8 oz. (226 g)

ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group.

© 2016 Gradus Group LLC. All Rights Reserved.

www.vellogear.com

All other trademarks are the property of their respective owners.
© Copyright 2016 Gradus Group

GG1