How To Attach Your Hand Grip:




1. Thread the hand grip strap through the strap mount on the camera.




2. Then, thread the hand grip strap through the adjustment buckle that is facing the camera, loop the strap over and thread through the bottom shoulder strap mount. The remaining strap will thread through the opposing side of the adjustment buckle.



3. Pull the remaining strap to secure.

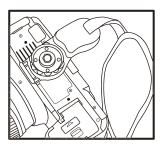

4. Align the 1/4"-20 thumb screw plate with the camera's tripod mount and begin to tighten.

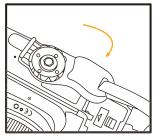

5. Rotate the 1/4"-20 thumb screw plate while securely tightening the 1/4"-20 thumb screw, and ensure that the thumb screw plate tab is properly aligned with the camera's base.



6. The strap can be tugged and realigned with the adjustment buckle to regulate length, hand size and overall tension.

Warranty

Vello provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance, EXCEPT AS PROVIDED HEREIN, VELLO MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.