

# AUTO LENS ADAPTER

## USER MANUAL

LAE-SE-NF

Nikon F-Mount to Sony E-mount Camera



## THANK YOU FOR CHOOSING VELLO

The Vello LAE-SE-NF Auto Lens Adapter is designed to attach Nikon F-Mount lenses to Sony's full-frame and APS-C E-mount cameras. For Sony cameras that use Focal Plane Phase Detection AF, the adapter offers support of autofocus, AE, aperture control, and Exif data transfer functionally with select Nikon G-type and E-type (AF) lenses. For other Sony E-mount

cameras, the adapter supports AE, aperture control, and Exif data transfer functionality with select Nikon lenses. Nikon prime, telephoto, or wide-angle lenses can now be used with Sony's mirrorless E-mount camera bodies and the settings can be adjusted from the camera.

The adapter is constructed of durable and lightweight

metal, and the inside has a matte finish coating to reduce internal reflections. This finish ensures that the light coming through the lens does not flare and ruin your exposure. The tripod foot has a standard 1/4"-20 socket for mounting to most tripods and minimizes the stress on the connection between the lens and camera.

## COMPATIBILITY INFO

Please reference the lens compatibility chart on our website [www.vellogear.com](http://www.vellogear.com) for a full list of tested cameras and lenses. We will conduct future lens testing and post upgraded firmware to our website.

Sony cameras with Focal Plane Phase Detection AF: Support of AF, AE, aperture control, and Exif data with select Nikon

G-type and E-type (AF) lenses. Select Nikon D-type lenses support AE, aperture control, and Exif data.

Select Sony E-mount cameras without Focal Plane Phase Detection AF: Support of AE, aperture control and Exif data with select Nikon G-type, E-type (AF), and D-type lenses.


## CONTENTS

- Vello LAE-SE-NF Auto Lens Adapter for Nikon F-Mount to Sony E-mount Camera
- Front and Rear Caps
- User Manual

## PRECAUTIONS

- Avoid sandy or dusty environments when using this adapter.
- Handle the adapter with care—don't drop it, and avoid bumps and shocks.
- Clean the adapter by wiping it with a soft, dry cloth.
- Keep this unit away from children.
- Do not use solvents such as benzene, alcohol, or detergents to clean the adapter.
- Be sure to read the operating instructions for your digital camera.
- Handle the unit with care.
- Keep this unit away from water and flammable gases or liquids.
- Use only parts provided by the manufacturer.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Vello will not be responsible for any damage.
- Please read and follow these instructions, and keep this manual in a safe place.

## OVERVIEW

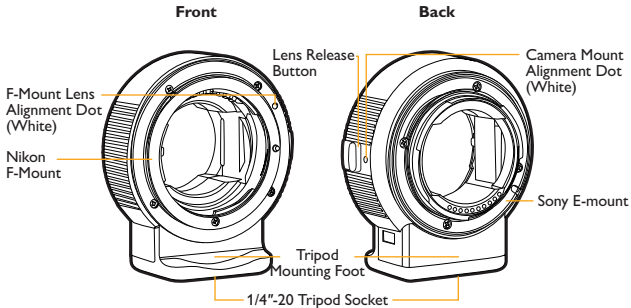

## MOUNTING THE LENS ADAPTER

*Note: Place the lens and camera on a stable, flat surface when mounting or removing the lens adapter.*

1. Turn the camera's power off.
2. Remove all caps before mounting.



3. Line up the white alignment dots on the lens adapter and the camera.
4. Carefully insert the lens adapter into the camera, and rotate clockwise until it locks into place.

5. Line up the alignment dot on the lens with the alignment dot on the lens adapter. ◀



6. Carefully insert the lens into the lens adapter, and rotate the lens assembly counterclockwise until it locks into place. ◀



*Important: When using a Nikon lens with an aperture ring (for example, a Nikon D-type lens) you must lock the aperture ring on the lens. If you want to control the aperture, you can adjust it from the camera in aperture priority or manual mode.*

## REMOVING THE LENS ADAPTER

1. Turn the camera's power off.
2. Press and hold the release button on the lens adapter.



3. Rotate the lens clockwise to release, and carefully detach the lens from the lens adapter.
4. Reattach the front cap to the lens adapter.





5. Press and hold the lens release button on the camera.



6. Rotate the lens adapter counterclockwise to release, and carefully detach the lens adapter from the camera.



7. Reattach the rear cap to the lens adapter.

*Note: If your lens has a built-in tripod collar, use the collar on the lens to mount the assembly to the tripod.*

## UPGRADING THE FIRMWARE

To upgrade the firmware, visit our website [vellogear.com](http://vellogear.com) and follow the instructions.

## SPECIFICATIONS

<b>Front Mount</b>	Nikon F-Mount
<b>Rear Mount</b>	Sony E-mount
<b>Tripod Mount</b>	1/4"-20 threaded socket
<b>Dimensions (H × W × D)</b>	3.2" × 2.9 " × 1.9" (8 × 7.3 × 4.8 cm)
<b>Weight</b>	7.5 oz. (213 g)

## ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A

PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.  
[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group.  
© 2016 Gradus Group LLC. All Rights Reserved.

[www.vellogear.com](http://www.vellogear.com)

All other trademarks are the property of their respective owners.  
© Copyright 2016 Gradus Group

GG3