

ViewZ®
21.5-INCH IPM SERIES
TFT-LED MONITOR



USER MANUAL

Please read this manual thoroughly before use, and keep it handy for future reference.

CONTENTS

SAFETY INSTRUCTION	2 ~ 3
CAUTIONS	4
FCC RF INTERFERENCE STATEMENT	5
INSTALLATION	6
CONNECTING WITH EXTERNAL EQUIPMENT	7
REMOTE FUNCTIONS	8
CONTROLS AND FUNCTIONS	9 ~ 12
IP CAMERA PROGRAM GUIDE	13 ~ 17
MOUNTING GUIDE	18
POWER MANAGEMENT	19
SPECIFICATION	20
TROUBLE SHOOTING GUIDE	21

This Monitor was
Manufactured by ISO 9001
Certified Factory

SAFETY INSTRUCTION

Important Safety Instruction

1. Read these instructions.
2. Keep these Instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug.
Apolarized plug has two blades with one wider than the other.
Agrounding type plug has two blades and a third grounding prong.
The wide blade or the third prong are provided for your safety.
If the provided plug does not fit into your outlet, consult an electrician for replacement of the bsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachment/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus the apparatus has been exposed to rain or moisture does not operate normally or has been dropped.




SAFETY INSTRUCTION

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

14 Minimum distances(e.g. 10cm) around the apparatus for sufficient ventilation.

“WARNING – To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture.”

“The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.”

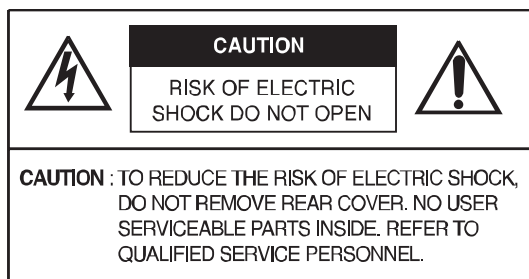

This symbol is intended to alert the user to the presence of uninsulated: dangerous voltage with in the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.

CAUTIONS

CAUTION

The power supply cord is used as the main disconnect device, ensure that the socket-outlet is located/installed near the equipment and is easily accessible.

ATTENTION

Le cordon d'alimentation est utilisé comme interrupteur général. La prise de courant doit être située ou installée à proximité du matériel et être facile d'accès

CAUTION TO SERVICE PERSONNEL

POWER SUPPLY CORD IS USED AS MAIN POWER DISCONNECT DEVICE IN THIS PRODUCT. UNPLUG THIS PRODUCT FROM THE WALL OUTLET BEFORE REMOVING THE BACK COVER AND SERVICING

EMISSION CHARACTERISTICS TESTED BY SEMKO

THIS PRODUCT HAS BEEN TESTED AND HAS SHOWN COMPLIANCE WITH THE NATIONAL SPECIFICATIONS SUCH AS SWEDISH MPR 1990.10.(MPR II)

► NEVER REMOVE THE BACK COVER

Removal of the back cover should be carried out only by qualified personnel.

► DO NOT USE IN HOSTILE ENVIRONMENTS

To prevent shock or fire hazard, do not expose the unit to rain or moisture.

This unit is designed to be used in the office or home. Do not subject the unit to vibrations, dust or corrosive gases.

► KEEP IN A WELL VENTILATED PLACE

Ventilation holes are provided on the cabinet to prevent the temperature from rising.

Do not cover the unit or place anything on the top of unit.

► AVOID HEAT

Avoid placing the unit in direct sunshine or near a heating appliance.

► TO ELIMINATE EYE FATIGUE

Do not use the unit against a bright background and where sunlight or other light sources will shine directly on the monitor.

► BE CAREFUL OF HEAVY OBJECT

Neither the monitor itself nor any other heavy object should rest on the power cord.

Damage to a power cord can cause fire or electrical shock.

FCC RF INTERFERENCE STATEMENT

NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

► DOC COMPLIANCE NOTICE

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

INSTALLATION


Before setting up the monitor, ensure that the power to the monitor and other attached devices are turned off.

※ **Notice: Stand & Screws are optional**

A. Connecting the stand

A-1. Place the monitor with its front facing downward on a soft cloth.


2. Assemble the Stand Base into the Stand Body in the correct direction using the included screws in the accessory box.

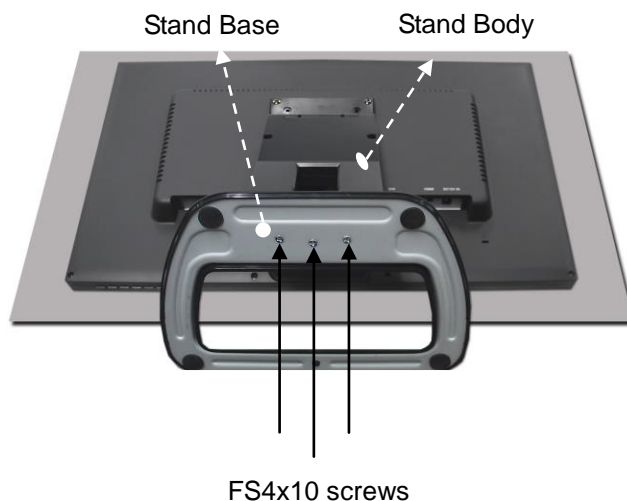

3. Once assembled take the monitor up carefully and face the front side.

B. Positioning your display

Adjust the position of the panel in various ways for maximum comfort. (Tilt Range: -3° ~ 75°)

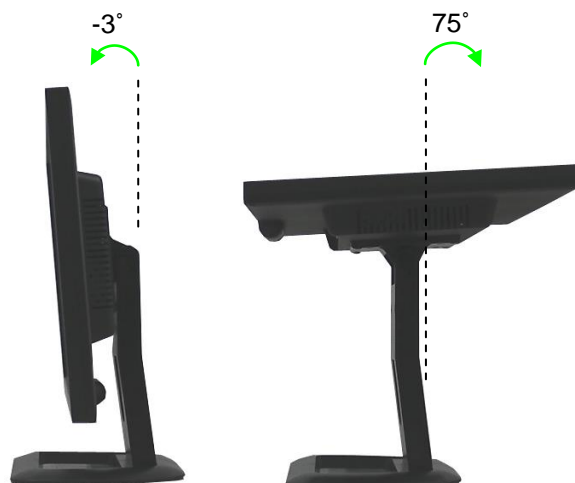

CONNECTING WITH EXTERNAL EQUIPMENT

Rear Connection



1



2



3



4



5



6



7

1. UPGRADE
2. DC 12V IN
3. USB HOST1,2
4. MICRO SD CARD
5. MICRO USB
6. ETHERNET OUT
7. ETHERNET IN

REMOTE FUNCTIONS

Remote Controller

1. POWER(🔌)

Turns the power ON or OFF. There will be a few seconds delay before the display appears.

2. SOURCE

Not operating.

3. ARC (Aspect Ratio Control)

Selects a screen ratio.

4. APC (Auto Picture Control)

Selects a picture mode.

5. ACC (Auto Color Control)

Selects a color mode.

6. AV1

Not operating.

7. AV2

Not operating.

8. PC

Not operating.

9. HDMI

Not operating.

10. AUTO

Android home key.

11. MUTE

Not operating.

12. MENU

Not operating.

13. EXIT

Exits the On Screen Display.

14. VOL(◀ & ▶)

Increases or decreases the level of OSD menu item / move the mouse cursor to the left or right in the app.

15. UP/DOWN (▲/▼)

Move the mouse cursor to the up or down in the app.

16. ENTER

Select the app.

17. INFO

Display the information about input source.


18. HOLD

Not operating.



CONTROLS AND FUNCTIONS

Bottom Key Control

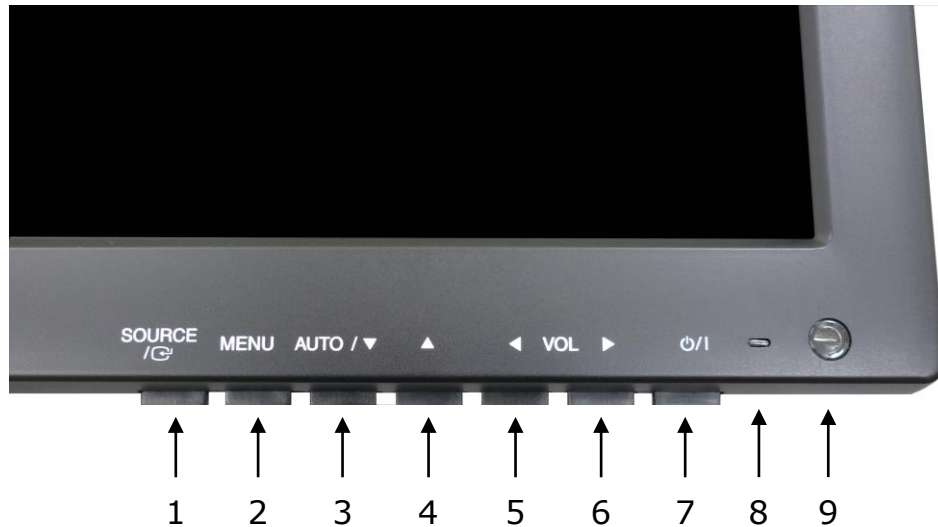

1. SOURCE/[icon]

Selects an input source.

Enters a submenu or accepts your selection in the OSD menu.(OSD menu works with HDMI only.)

2. MENU

Activates or exits the OSD.

Moves previous menu or status in the OSD.

3 & 4. AUTO/▼ & ▲

Moves another option in the OSD.

5 & 6. ◀ VOL ▶

Adjust the volume or menu settings.

The first production goods do not have the speaker and stereo out, so this function does not work.

7. ⏻/I

Turns the power on or off. There will be a few seconds delay before the display appears.

8. LED

Turned on: Blue color.

Turned off: LED Off

9. IR Sensor

Remote controller sensor.

CONTROLS AND FUNCTIONS

OSD Menu Description


All picture, sound settings and setup for the monitor can be adjusted in the OSD menu.

(On Screen Display)

To adjust the OSD screen:

1. Press the **Menu** button to enter the OSD menu.
2. Press the ▲/▼ buttons to select the desired option. The selected option is highlighted.
3. Press the ► button to enter the submenu for adjusting items.
4. Change the value you wish to adjust by using the ▲/▼ buttons.
5. Press the ◀ button to exit the submenu for adjusting items.
6. Press the **Menu** button to exit the OSD menu.

A. PICTURE

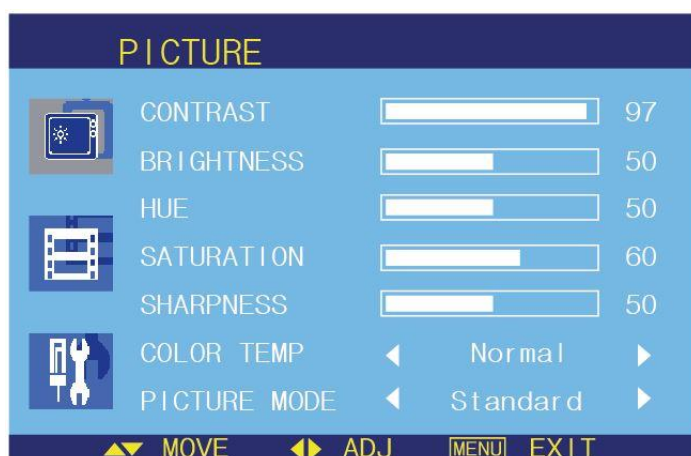

Option	Function	Value
CONTRAST	Adjusts intensity of the image.	0 ~ 100
BRIGHTNESS	Adjusts brightness of the screen.	0 ~ 100
HUE	Adjust the hue of picture.	0 ~ 100
SATURATION	Adjust the saturation of picture.	0 ~ 100
SHARPNESS	Adjusts sharpness of the picture.	0 ~ 100
COLOR TEMP	Select the color temp of picture	Normal, Warm, Cool
PICTURE MODE	Select the picture mode of picture.	Standard, Cinema, Vivid

※ Unavailable in RGB-PC Mode.

CONTROLS AND FUNCTIONS

B. SETUP




Option	Function	Value
Language	Sets the language of the OSD menu.	English, German, French, Italian, Spanish, Nederland and Korea
OSD	Sets the OSD.	See the table on Next page
Key Lock ¹⁾	Locks all buttons of the monitor. Note: Use remote controller to unlock.	Off or On
ARC	Sets the screen ratio.	AV Mode: 16:9, 1:1, 4:3, 14:9, Zoom1, Zoom2, Under PC Mode: 16:9, 4:3 HDMI Input: 16:9, 4:3, JUST SCAN ¹⁾ 1) Just Scan: This function is only operated when DTV signal of HDMI is inputted.
RECALL	Resets the monitor settings to the factory default.	

1) How to unlock

- ① On the front key: Press the MENU and UP button at the same time over 3 seconds.
- ② On the Remote Controller: The Remote Controller operates well because the Key Lock function is only allowed for the front key of this product.

CONTROLS AND FUNCTIONS


C. OSD

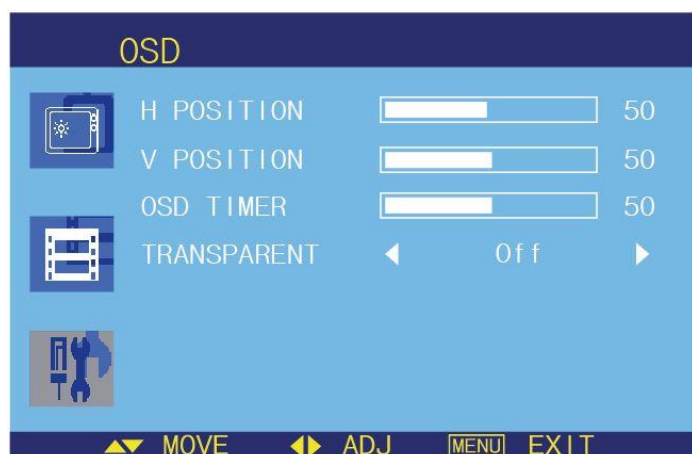

Option	Function	Value
H POSITION	Move OSD horizontally on screen right or left.	0 ~ 100
V POSITION	Move OSD vertically on screen up or down.	0 ~ 100
OSD TIMER	Adjust OSD displaying time.	5 ~ 60
TRANSPARENT	Adjust OSD transparent.	Off or On


IP CAMERA PROGRAM GUIDE


Main Screen

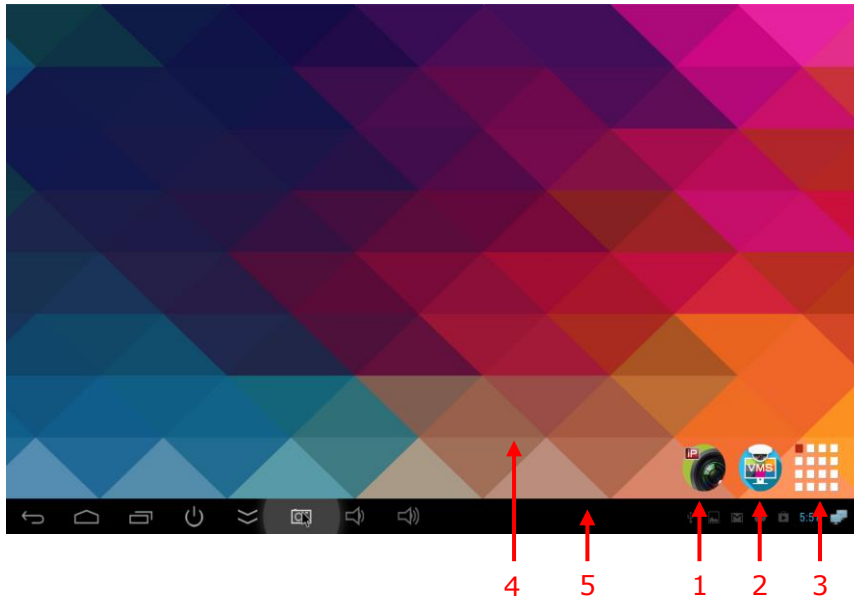

1. IP camera app
2. VMS or Favorites Folder
(This folder is not locked)
3. All apps (Password Protected)
4. Background
5. Navigation bar


Shortcut to the app

If you click  button, you can add new IP camera.


If you long-click  button, all controls are locked.

If you long-click  button, all controls are unlocked.


→ **default id/ password is root/root**

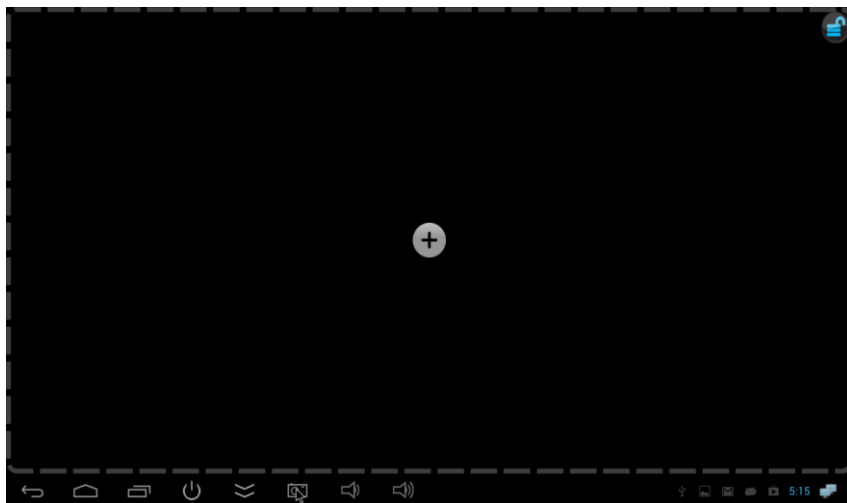

IP CAMERA PROGRAM GUIDE

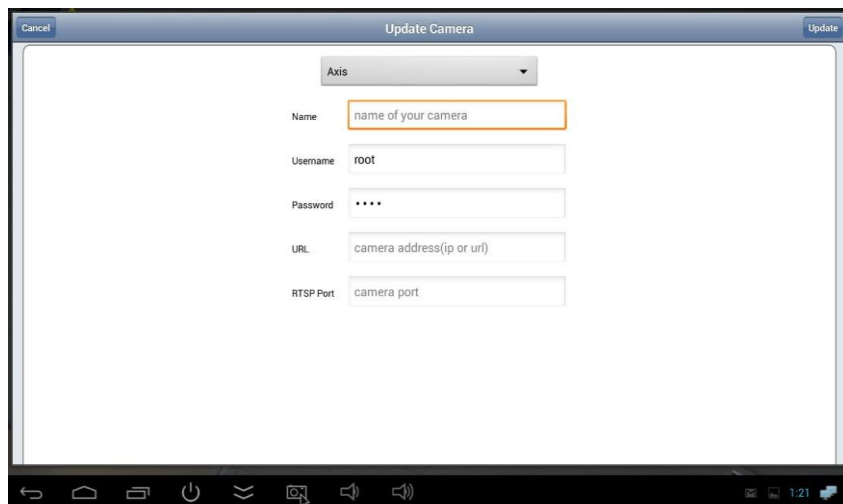

Enter camera information and click update to add to available camera list.

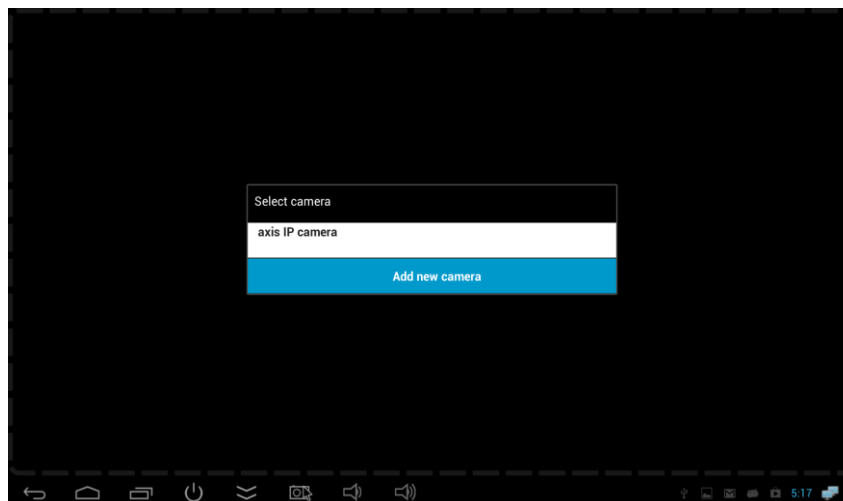


Select the saved IP camera from the available camera list.




IP camera's picture is displayed.

IP CAMERA PROGRAM GUIDE

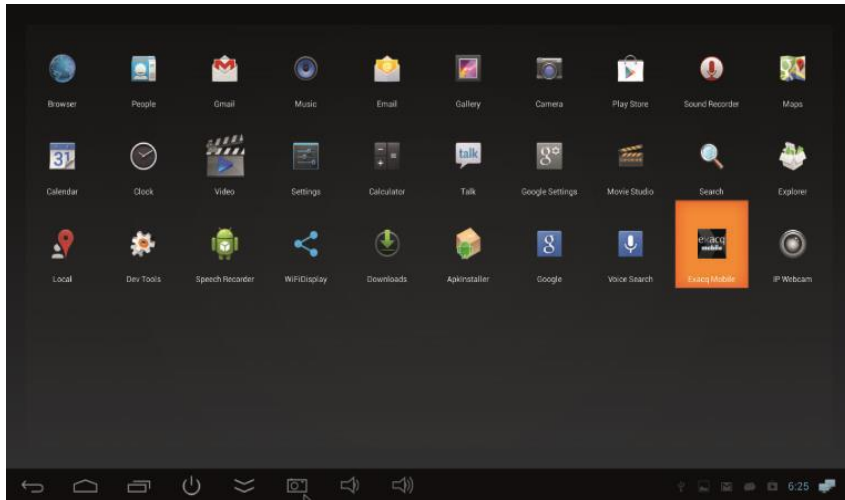


Shortcut to the VMS

You can add apps to VMS/Favorites Folder by long-clicking the app within the All Apps area.

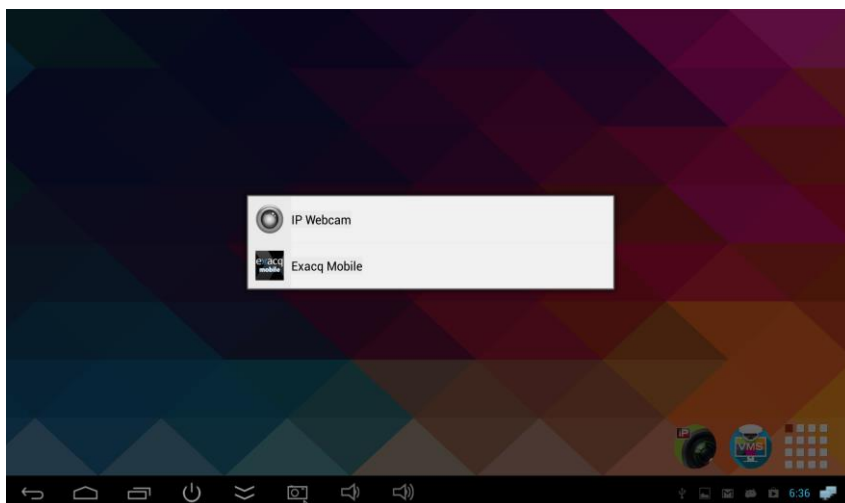

From the VMS Shortcut menu, click an app to open it. (Long-clicking the app will remove it).

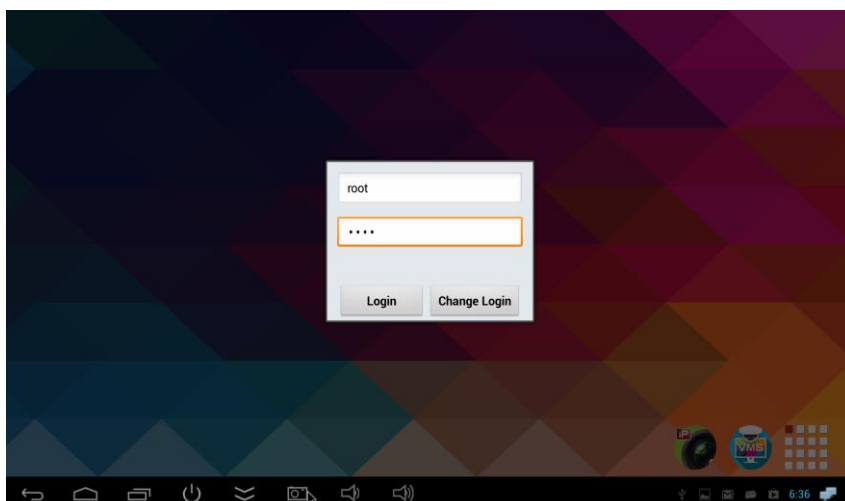

*Password


The button to access all apps requires a password.

→ **default id/ password is root/root**

Password can be changed by populating fields and accessing the “Change Login” menu


IP CAMERA PROGRAM GUIDE

Background

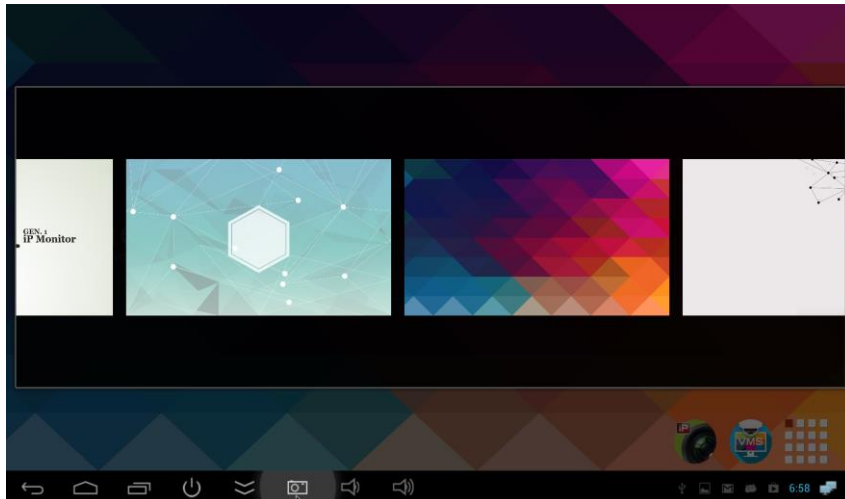

If you long-click the background, you can change background image.

Navigation bar

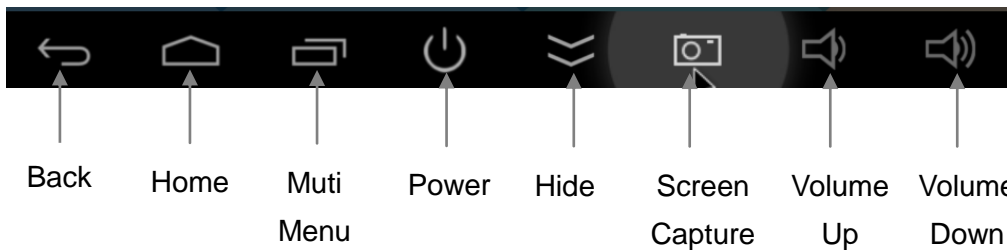


IP CAMERA PROGRAM GUIDE

Last App Recovery

Upon reboot, this feature will automatically resume the last app that was used in the event that power was lost.

Ethernet Settings

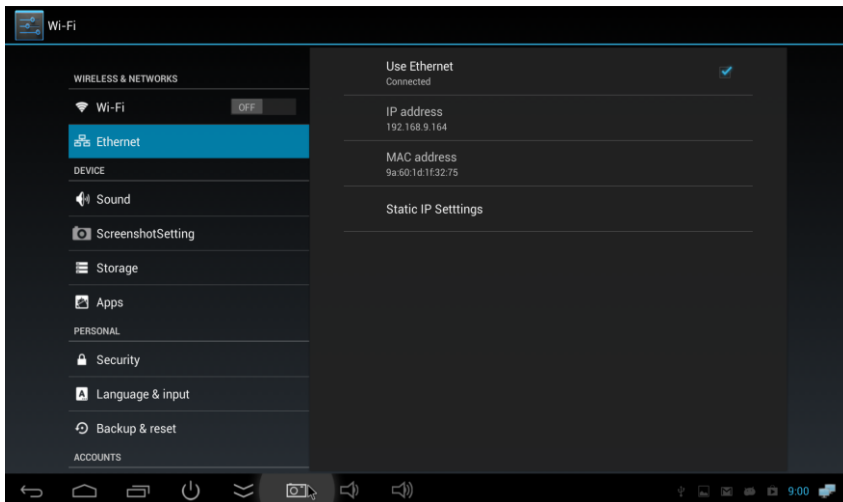

Open “Settings” in the “All Apps” section.

Click on the Ethernet tab.


Enable “Use Ethernet”.

A static IP Address can also be added in this section

MOUNTING GUIDE

Wall mounting (Optional)

The LCD monitor is suitable for wall mounting by using the VESA 100 standard wall mount (not included in the delivery).

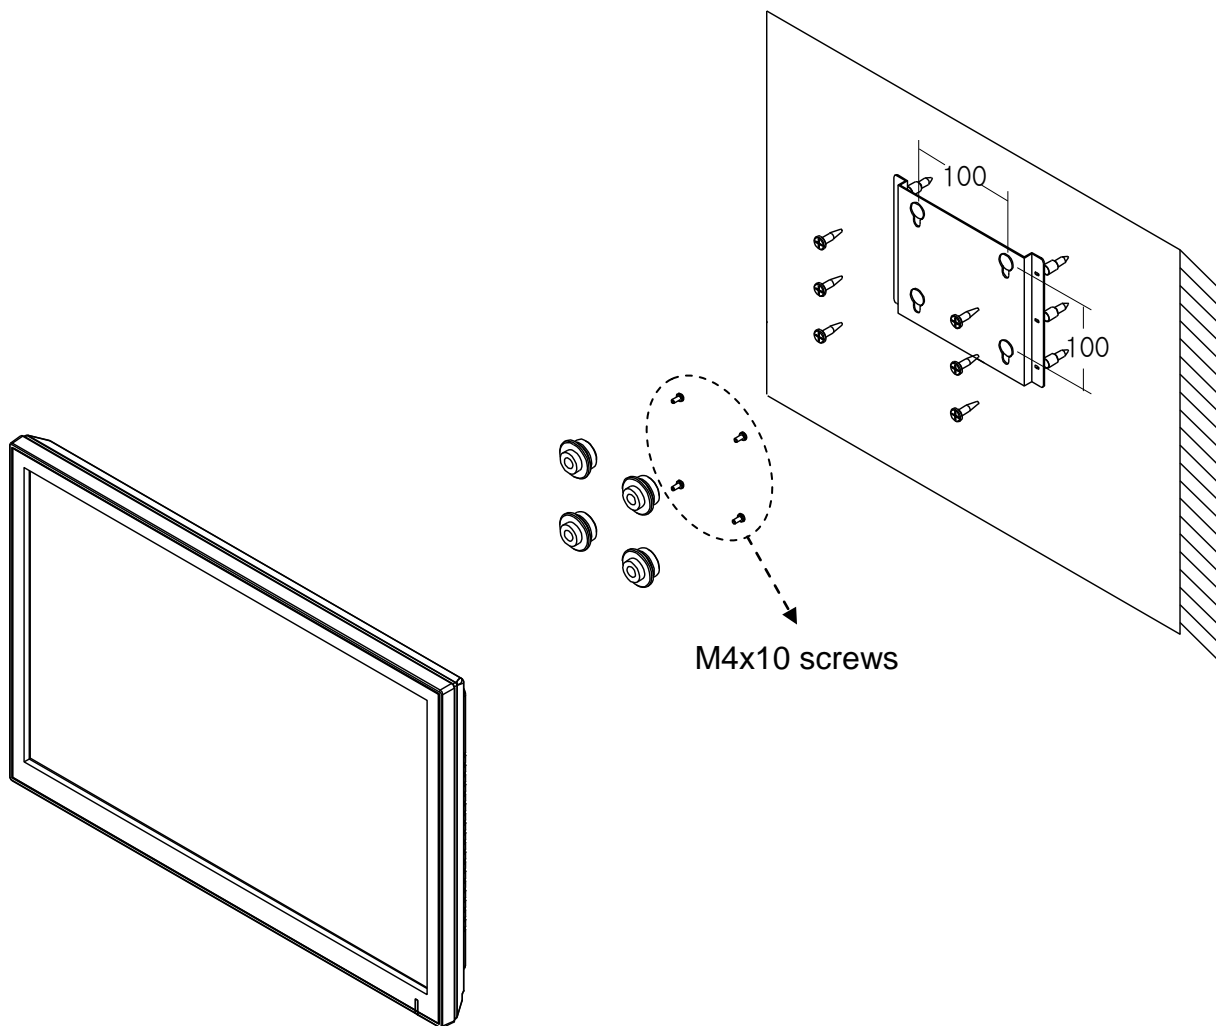

※ Attention!

You must use four M4x10 screws to assemble this monitor and the wall mount bracket.

※ WARNING!

If user use longer than M4x10 it may cause the damage on the unit. Please follow instructed bolt size & length.

POWER MANAGEMENT

Power Consumption

Mode	Power Consumption
Turned On	< 25W
Turned Off	< 1W

LED Indicator


The power management feature of the monitor is comprised of two stages:
Turned on(Blue) and turned off(LED Off).

Mode	LED	Monitor Operation
Turned On	Blue	Normal Operation
Turned Off	Off	Not Operation

► Accessories

1. Power cord
2. Power adapter
4. Stand base & FS4x10 screws 3 EA
5. Remote controller
6. Batteries
7. Quick Manual
8. CD (User manual,Quick manual,IP CAMERA App & Lanucher Files)

SPECIFICATIONS

	21.5"
LCD Type	21.5" Diagonal AM-TFT(Active-Matrix)
	Pixel pitch(mm): 0.24825(H) x 0.24825(V)
	Brightness: 250cd/m ² (Typical)
	Contrast ratio: 1000:1 (Typical)
	Viewing angle: 170°/160° (H/V)
	Response time: 5ms (Typ., on/off)
Resolution (H x V)	1920X1080@60Hz
Frequency	Horizontal: 31~80kHz, Vertical: 56~60Hz
Input Signal	UPGRADE
	USB HOST1,2
	MICRO SD CARD
	MICRO USB
	ETHERNET OUT
	ETHERNET IN
Active Display Area (H x V)	476.64mm x 268.11mm
Packing Dimensions (W x H x D)	580mm x 440mm x 145mm (22.83" x 17.32" x 5.71")
Weight	Net: 4.31kg(9.50 lbs)
	Gross: 5.68kg (12.52 lbs)
Electrical Ratings	12V  3.0A (100~240V, 50/60Hz)

►► **NOTE:** Technical specifications are subject to change without notice.

TROUBLESHOOTING GUIDE

TROUBLE	TROUBLESHOOTING TIP
No image on display screen	<ol style="list-style-type: none">1. Check that power cord of the Monitor have been connected securely into wall outlet or grounded extension cable or strip.2. Power switch should be in the ON position and LED is lit.3. Check that the Brightness and/or the Contrast adjustments of the Display have not been turned down to minimum levels.
"NO SIGNAL" message on screen	<ol style="list-style-type: none">1. The signal cable should be completely connected to the video card/computer.2. The video card should be completely seated in its slot and the computer is switched ON.
Display image is not centered, too small or too large in PC mode	Push the down key in front side or Auto key in remote controller.
Vertical or Horizontal noise is present in the picture	Adjust Clock and Phase in the OSD.

WEEE Symbols

**Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)**
(Applicable in the European Union and other
European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



[illegible]