

■ Using DVR


1. Plug-in DVR into wall outlet as shown in illustration in Powering DVR section.
2. Factory default setting is set to record with 30 second video file. Recording is activated when movement is detected.
3. DVR starts recording automatically when the DVR is plugged-in.
4. DVR also starts to detect movement when the DVR is plugged in.

■ Retrieving Video Footage

1. Video file is stored in the SD Memory card.
2. Remove SD card from DVR.
3. Insert SD card into a card reader or SD card slot in your PC.
4. Computer detects the storage and user may browse and operate the storage as typical folder directory.
  - i.e. Rename, copy and paste, delete, duplicate, etc.


NOTE:

Every single video file is only recorded with 30 second time length. This setting is fixed and does not allow to be edited because product is released with 30 second video recording function.

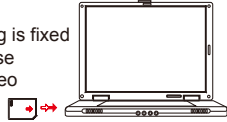

NOTE:

Unlike PV-AC20, PV-AC10 does not include USB and AV Out connection. Supports up to 16GB SD card.

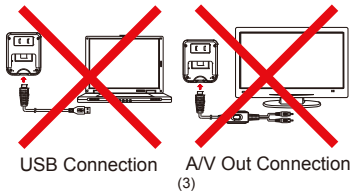


USB Connection

AV Out Connection  
(3)

PV-AC10

Video Recorder in Adapter Design  
Quick Guide

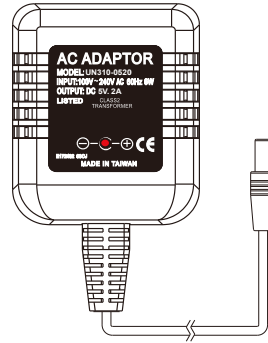


LawMate

Law Enforcement Product Manufacturer

V1.0

尺寸16CMx12cm

■ Name and Parts

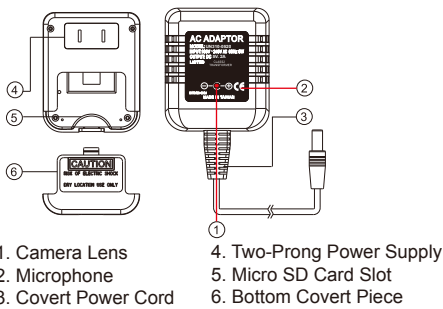

1. Camera Lens
2. Microphone
3. Covert Power Cord

4. Two-Prong Power Supply
5. Micro SD Card Slot
6. Bottom Cover Piece

■ Package Content



Covert Power Cord



SD Memory Card  
(4GB Above)




Adapter Head -  
European Standard

(1)

■ Powering DVR

1. This DVR is not powered by battery; instead, it is powered by two-prong wall outlet.
2. Plug-in DVR into wall outlet as shown in the illustration below.
3. DVR starts recording automatically in motion detection mode.

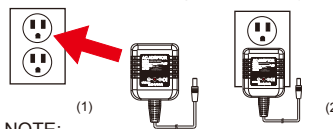

NOTE:

This product is also compatible with extension cord in order to adjust plug-in angle!

■ DVR Installation

- |  |   |
|--|---|
| <p><b>Step 1</b></p> <p>1. Slide the bottom cover piece in downward direction.</p> | <p><b>Step 4</b></p> <p>4. Insert 4GB storage above SD memory card into SD card slot.</p> |
| <p><b>Step 2</b></p> <p>2. Gently remove the cover piece completely.</p>           | <p><b>Step 5</b></p> <p>5. Insert the covert power cord into original position.</p>       |
| <p><b>Step 3</b></p> <p>3. Gently remove the covert power cord completely.</p>     | <p><b>Step 6</b></p> <p>6. Slide the bottom cover piece back to original position.</p>    |

(2)