

## SETTINGS

MiNT



Switch on Mint Flash Bar



Lighten / darken control on SX-70 camera

	WITHOUT FLASH	WITH FLASH
Film for SX-70		
Film for 600	ND Filter	
Outdoor	✓	✓
Indoor	✗	✓

## SAFETY INFORMATION

Do not disassemble the device, as high voltage components inside could cause electrical shock. Do not immerse the device in water or other fluids or use it near flammable or explosive gases.


## USAGE ENVIRONMENT

Never leave the device in environments of high temperature (+40°C / 104°F) or high humidity for extended periods of time.

<http://www.mint-camera.com>

# MINT FLASH BAR 2

FOR USE WITH  
POLAROID™ SX-70 CAMERAS

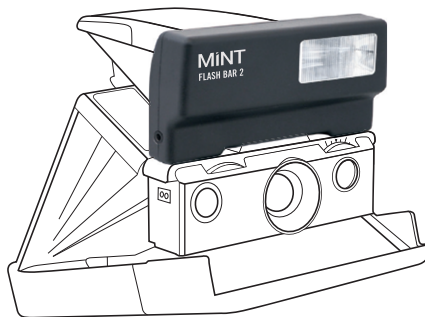

## MINT FLASH BAR 2

Mint Flash Bar 2 is a re-usable high quality electronic flash bar device for all Polaroid™ folding and box-type SX-70 cameras and optimized for use with Polaroid Film. The special ND-compensation mode allows for usage of film for 600 type cameras. Simple attach it to your cameras' flash-socket and take brilliant and perfectly illuminated instant photos in all light situations.

Mint Flash Bar 2 features some major improvements over previous versions. Charging time has been reduced greatly and an auto-sleep function has been added to extend battery-life. Two extra color filters enable you to experiment with tinted light when shooting at low light conditions. The new 2.5mm audio jack allows for easy syncing of additional, external flash units.

## TIPS FOR USING MINT FLASH BAR


- Try focusing behind the object if you want your photo to be brighter. The aperture of the camera will widen (for folding SX-70 only).
- Adjust the lighten/darken control on your SX-70. If you want your photo to be brighter, just simply push it to a little bit bright.
- Test your SX-70 socket with an empty film cartridge for a few times if it is your first time using a flash.

## TECHNICAL SPECIFICATIONS

<b>Guide number</b>	20 (Hi), 12 (Lo)
<b>Power source</b>	2x AAA-size batteries (included), Alkaline or Ni-MH required
<b>Battery life</b>	50+ flashes with fresh batteries
<b>Charging time</b>	12-25 sec
<b>Color temperature</b>	5600K
<b>Flash duration</b>	1/2000 sec (LO), 1/200 sec (Hi)
<b>Idle time</b>	Auto-sleep after 15mins
<b>Color filters</b>	hot pink/ chartreuse
<b>Ext. flash sync</b>	connect external flash units with 2.5mm audio jack to your flash.
<b>Dimensions</b>	103x23x49mm (4x0.8x1.9")
<b>Weight</b>	73g (2.5oz)

## HOW TO USE MINT FLASH BAR 2

- 1 Open the battery compartment and insert two fresh AAA-size batteries (watch correct alignment).
- 2 Attach Flash Bar to your Polaroid SX-70 camera.
- 3 When using the film for Polaroid SX-70 type cameras set the function switch to HIGH power (right). When using the film for Polaroid 600 type cameras set the function switch to LOW power (center).
- 4 As soon as the green light illuminates, Flash Bar is fully loaded and ready to go.
- 5 Flash Bar will go off in sync with the shutter release button of your camera.
- 6 When not in use please make sure to turn Flash Bar off (set switch to left position).

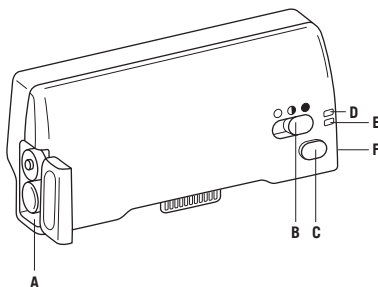

- A** battery compartment    **B** OFF—LOW—HIGH button  
**C** test flash    **D** is green: fully charged    **E** is solid blue: charging, flashing blue: low battery    **F** 2.5mm audio jack