

尺寸：630*295mm 三折页
80克书纸 正反面黑白印刷

10.1" Dual screen portable DVD player

User's Guide for Model SDVD1082

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

CAUTION
HOT SURFACE
ATTENTION
SURFACE CHAUDE

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Functions & Controls

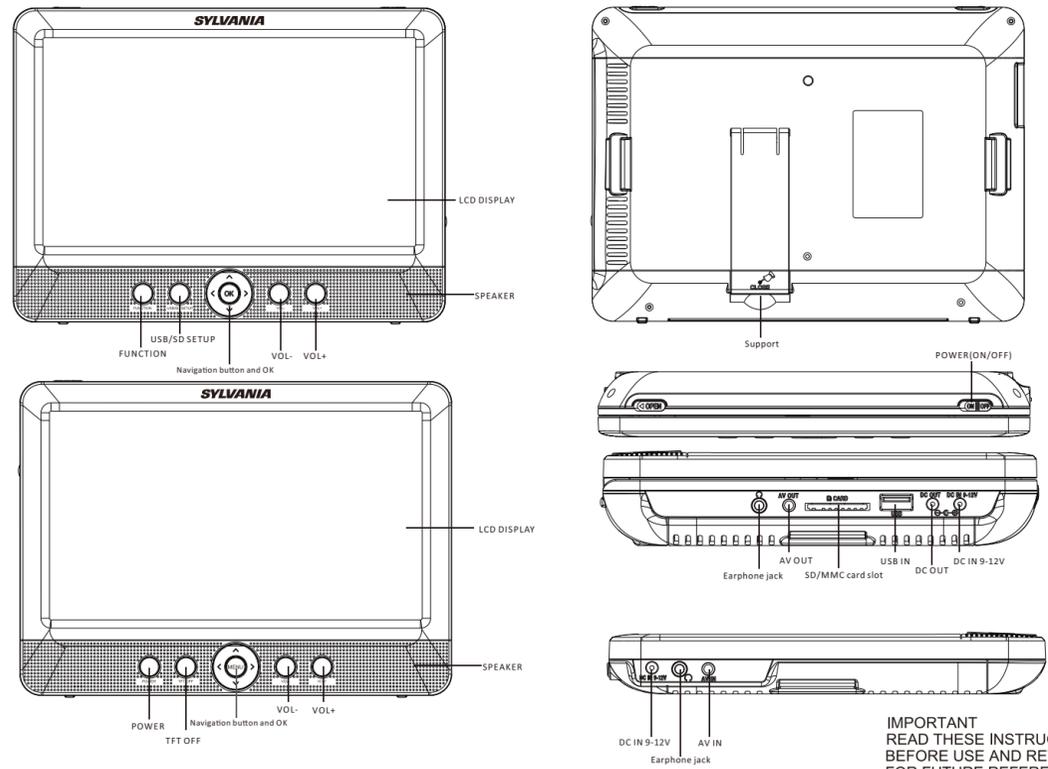

NOTE:
Pull out the stand in the bottom cabinet of the main unit. The main unit can stand on a flat surface by itself.

The Parental default password is pressing "FUNCTION" in quadruplicate.
You can get TTS (Text to Speech) Function in the general SETUP page once pressing SETUP button for a while.
If pressing the SETUP button shortly, you can change the media source DVD/USB/SD.



PACKAGE CONTENTS

Please make sure the following items are included in package. If any item is damaged or missing, contact your dealer.




For service assistance and product information, please call: **1-800-968-9853**.
Pour obtenir assistance et information appelez: **1-800-968-9853**.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15,
MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

Using the Two Displays

Power & Video

Note: The user can connect 2 units to play single DVD. Requires a 3.5mm A/V/DC Cable (included), AC/DC power adapter (included), or 12V DC car adaptor (included).

1. Plug the included AC/DC power adapter into a wall outlet, or plug the 12V DC car adaptor into the cigarette lighter of your vehicle, then plug the other end to the DC IN on the Main display.
2. Plug the AV/DC cable into the AV Output and DC Output on the Main display and the AV Input and DC Input on the secondary display.
3. Audio and video played on the Main display can now be seen on the secondary display.
4. Short pressing UP/+ on the main unit to play previous video; short pressing DOWN/- to play next video.
5. Press the VOL+ on the main unit to increase the voice output; Press the VOL- to decrease the voice output. Press OK for a while on the main unit to be stopped, press OK again to resume playback.
6. Press the right arrow to make the fast forward; Press the left arrow to make back forward.

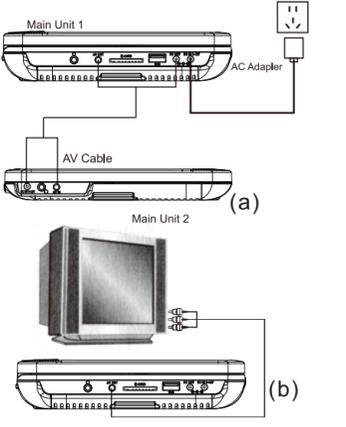

Audio/Video Output

Using the 3.5mm Audio/Video

- Requires a 3.5mm to 3 x RCA audio/video cable (not included).
1. Connect the 3.5mm to 3 x RCA audio/video cable to the AV Output on the Main display.
 2. Connect the RCA audio/video cable to the RCA stereo audio inputs and composite video input on a television.
 3. Audio and video played through the portable DVD player will now be output through the connected television.

Virtual Remote Operation

1. Press "FUNCTION" button when disc is playing, you will see a virtual remote control as below, control as below, and the playback will be pause.
2. The virtual key is shown on the left of the menu, and the current playback status.
3. Use the arrow buttons button to choose the icon, when the icon is selected, you can see the description at the bottom.
4. Press OK button, the selected virtual key will be activated, OK=Selected functions icon will be shown at top left for 10 seconds, in these 10 seconds you just need to press OK button to change the style of the function. If the icon disappears, the OK will not work. (Icon will not show for Search, Return, or Mute).
5. You can also press the FUNCTION button to close the virtual remote menu without any operation. The player will resume playing after exiting the menu.

Virtual Remote Operation


1. SRH (Search): Press the Key, you can see the number bar below, use up/down/left/right key to move the cursor, press OK to confirm, when playing DVD, you can change the chapter and the title, press the t/ch icon change the item you want to change. When playing CD, you can select the track.
NOTE: To select the title, you need to enter two numbers.



2. M(Menu): to enter or exit menu root.
3. ZOOM: When playing DVD discs, you can zoom in, press the ZOOM button and OK to change the image size according to the following sequence: x2 x3 x4, 1/2 1/3 1/4, when playing JPEG file, you can zoom in and out, press the ZOOM button and OK button to change the image size according the following sequence: 100%, 125%, 150%, 200%, 75% & 50%.
4. TT(Title): To display title information
5. LANG(Language): To select audio language

Headrest Straps

1. Slide the strap through the two attachment points on the rear of the unit.
2. Pull the strap through the buckle as shown.
3. Tighten the straps around the seat headrests.

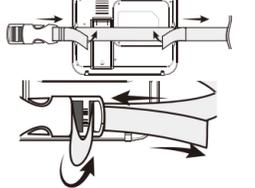

Playing Media

Loading and Playing a Disc

1. Manually open the disc door.
2. Load a disc into the DVD player, label side facing up.
3. Manually close the disc door. After a disc is loaded it should begin playing automatically.
4. If the disc does not begin playing automatically press the Play/pause button on the DVD unit.

 
Memory Cards & USB Devices

1. Insert a USB Drive into the USB Slot, or insert a Memory Card into the Memory Card Slot.
2. Press the SETUP button shortly on the DVD unit to select the desired media source.
3. Use the UP+/ Down- / OK buttons to select and play content from the connected Media drive you have connected.



NOTE:
1. When the disc is in the submenu, pressing the function key will go back to the title menu.
2. In the status of STOP, the FUNCTION is valid. But in no disc state, then the FUNCTION is invalid.

6. SUB(Subtitle): To select subtitle language when playing DVD CD. Such as elapsed time and remaining time.
7. OSD: Display the disc of DVD/CD/MP3, you can change the repeat style by press repeat button. For different type of disc, it changes according different sequence.
8. (Repeat): When playing disc of DVD/CD/MP3, you can change the repeat style by press repeat button. For different type of disc, it changes according different sequence.



9. Slow: You can press key to change the playing speed slowly while playing DVD. Then press OK repeatedly to change the playback speed according to the following sequence: 1/2, 1/4, 1/8 & 1/16.
10. (Return): To return to the main menu.
11. (MUTE): To return mute
12. Angle: When playing a DVD disc multi-angles, Angles button and OK button to change the display angle.
NOTE: The function is available only for discs with multi-angle.

Playing JPEG file

1. Place a JPEG disc into the tray, the unit will start reading and playing.
2. Press and OK button to select a JPEG file from the menu.
3. Press to rotate the picture clockwise.
4. Press to reverse the picture horizontally and press [] to reverse the picture vertically.

Function Operation:

Press FUNCTION key you will see the toolbar as below

Press the to move the cursor to select functions.
Press OK to select the function.

- :Return to the main menu.
- :To repeat one, folder off
- :To ZOOM in/out the image during playback

Press FUNCTION to exit the toolbar

Play MP3 file

1. Place an MP3 disc into the disc door.
2. Press to select the file; Press the OK button to play the select file.

Function Operation:

Press FUNCTION then you will see the toolbar as shown below:




Press the to move the cursor to select functions,
Press the number key to select the track.
Press OK to select the function.
 :MUTE, to turn mute.
 :To select repeat one, repeat folder, repeat off.
Press FUNCTION to exit the toolbar


Setup Operation on Main unit 1

- 1.Press SETUP for a while on the unit to show the setup menu,
- 2.Press LEFT or RIGHT to select an item . The submenu of the selected item will be instantly shown.
- 3.Press UP/+ or DOWN/- to select an item in the submenu, then press OK to enter. Press UP/+ or DOWN/- to select an option and then press OK to confirm or press LEFT to cancel.
- 4.Press UP/+ or DOWN/- to continue to set other items in the submenu.
- 5.Press Left to go back to the superior menu of the current one.
6. Press SETUP again to exit the setup menu.

SETUP Menu 1.0

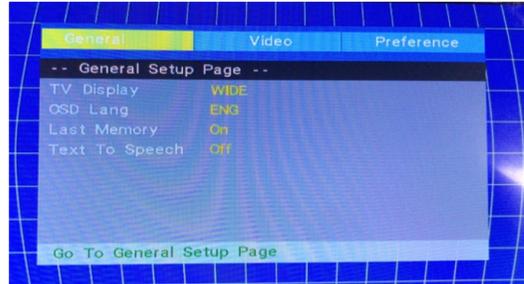

SETUP Menu 2.0

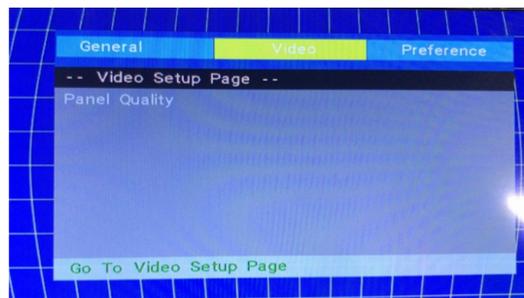

SETUP Menu 3.0



Setup Operation on Main unit 2

- 1.Press Menu on the unit to show the setup menu.
- 2.Press UP/+ or DOWN/- to select an item in the submenu and press LEFT /RIGHT to change the data / status.

SETUP Menu

1. Brightness

Adjust the brightness: 0~100

2. Contrast

Adjust the contrast: 0~100

3. Color

Adjust the color: 0~100

4. Language

Select different language

5. TTS

Select On or Off

6. Reset

Press Reset to recover to the factory default setup.

To make a warranty claim, please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.